


# Caldwell Hall

## Basement Floor

Emergency Evacuation Assembly Point is across  
Turner Place by the Couch Building

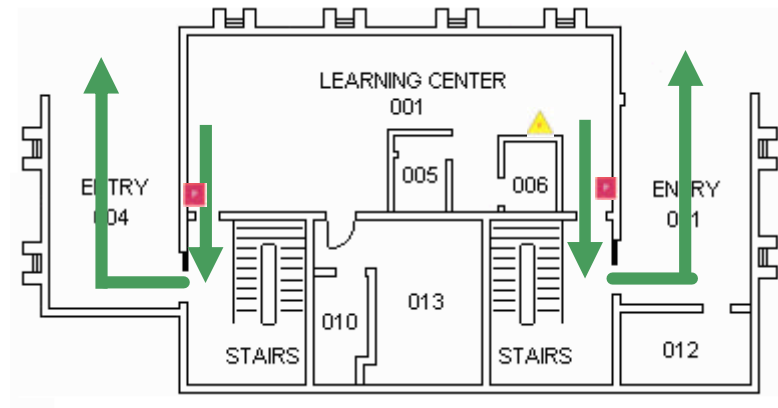

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at  
404-533-7197 or the Campus police at 404-894-2500.

# Caldwell Hall

## First Floor

Emergency Evacuation Assembly Point is across  
Turner Place by the Couch Building

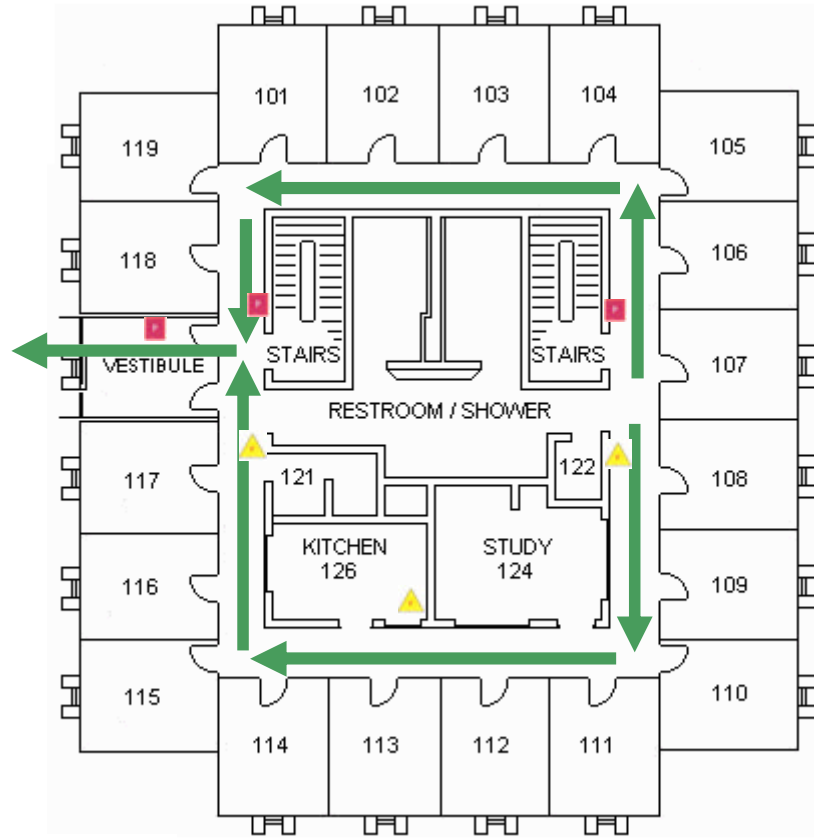

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at  
404-533-7197 or the Campus police at 404-894-2500.

# Caldwell Hall

## Second Floor

Emergency Evacuation Assembly Point is across Turner Place by the Couch Building

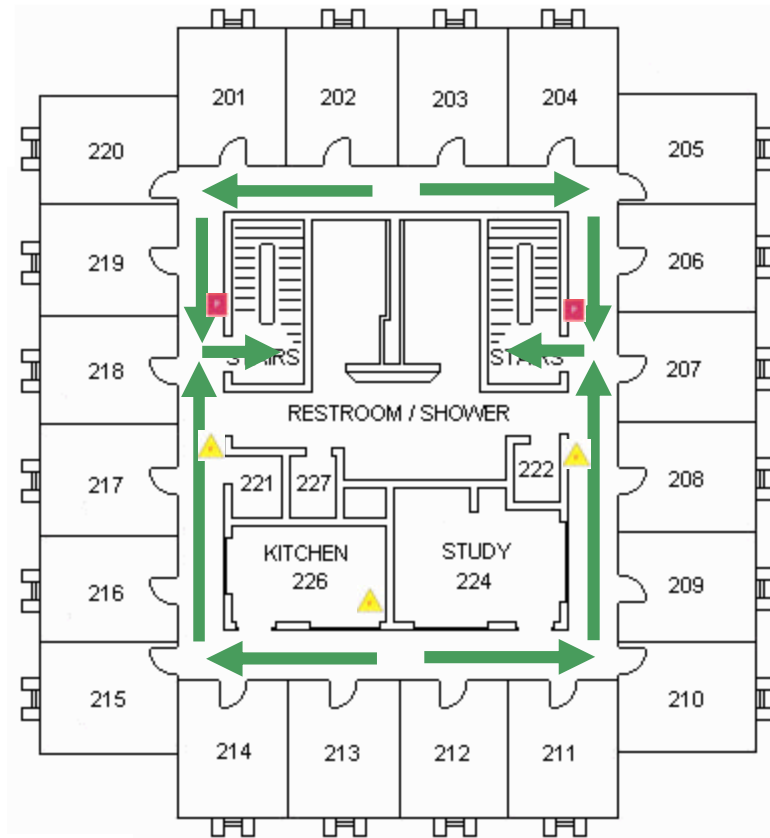

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

# Caldwell Hall

## Third Floor

Emergency Evacuation Assembly Point is across Turner Place by the Couch Building

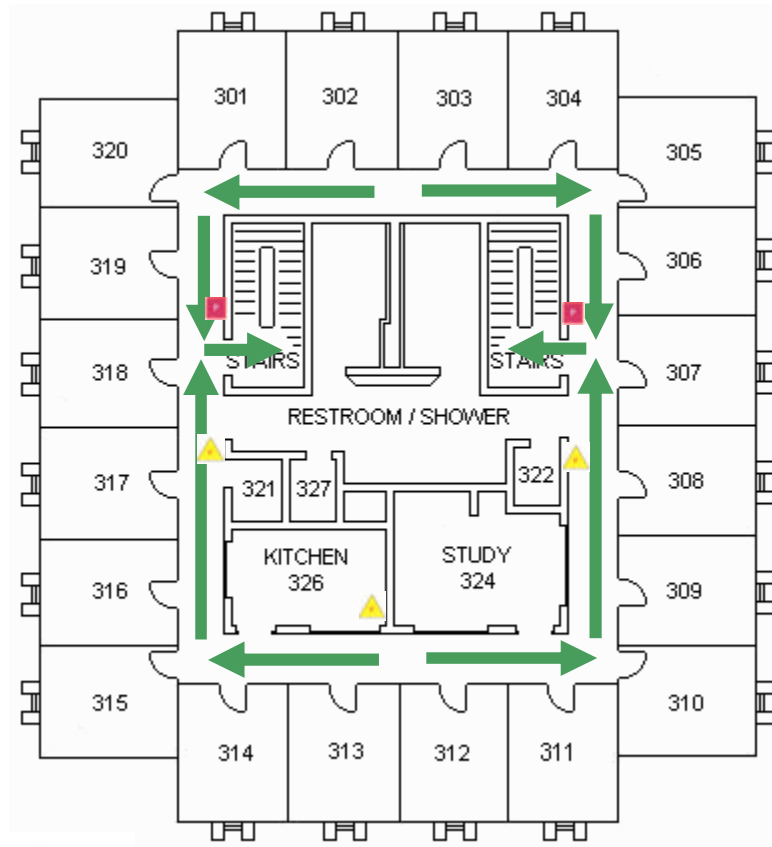

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

# Caldwell Hall

## Fourth Floor

Emergency Evacuation Assembly Point is across Turner Place by the Couch Building

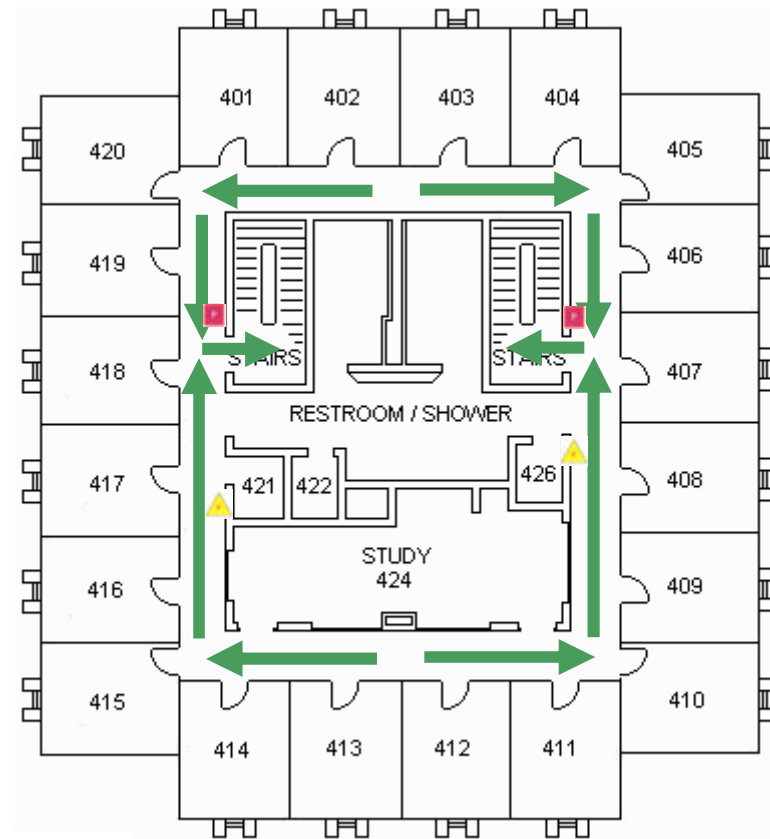

FIRE EXTINGUISHER



FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.