


Fitten Hall


Basement Floor

Emergency Evacuation Assembly Point is across
McMillan St. by Sixth St. Apartments

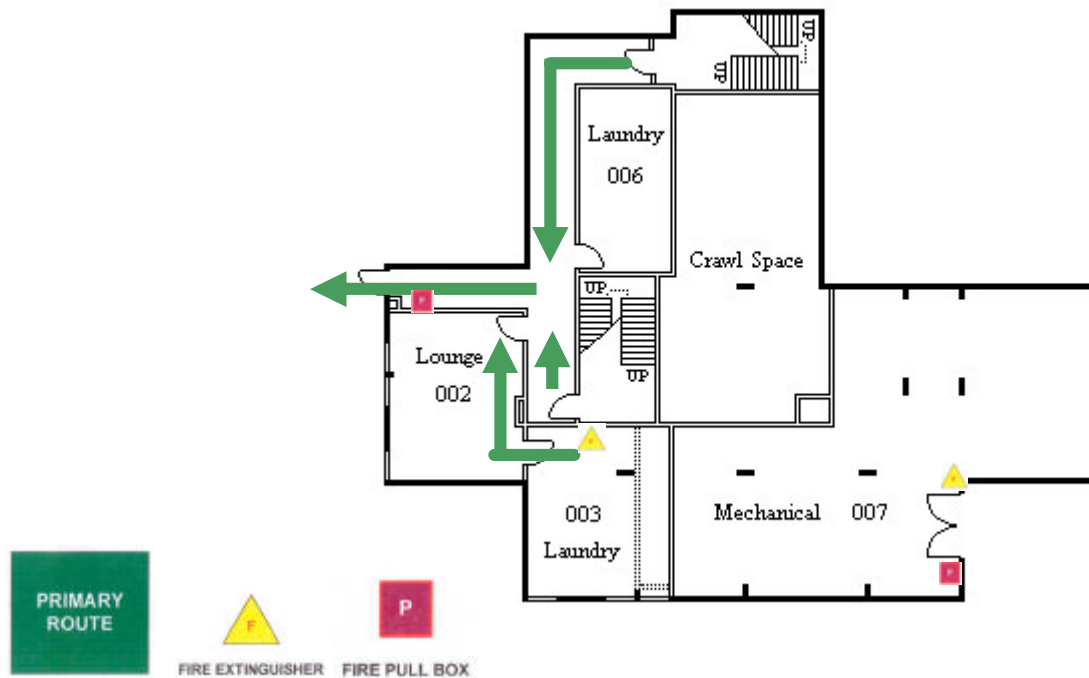

For emergency access contact the duty staff pager at
404-533-7197 or the Campus police at 404-894-2500.

Fitten Hall First Floor

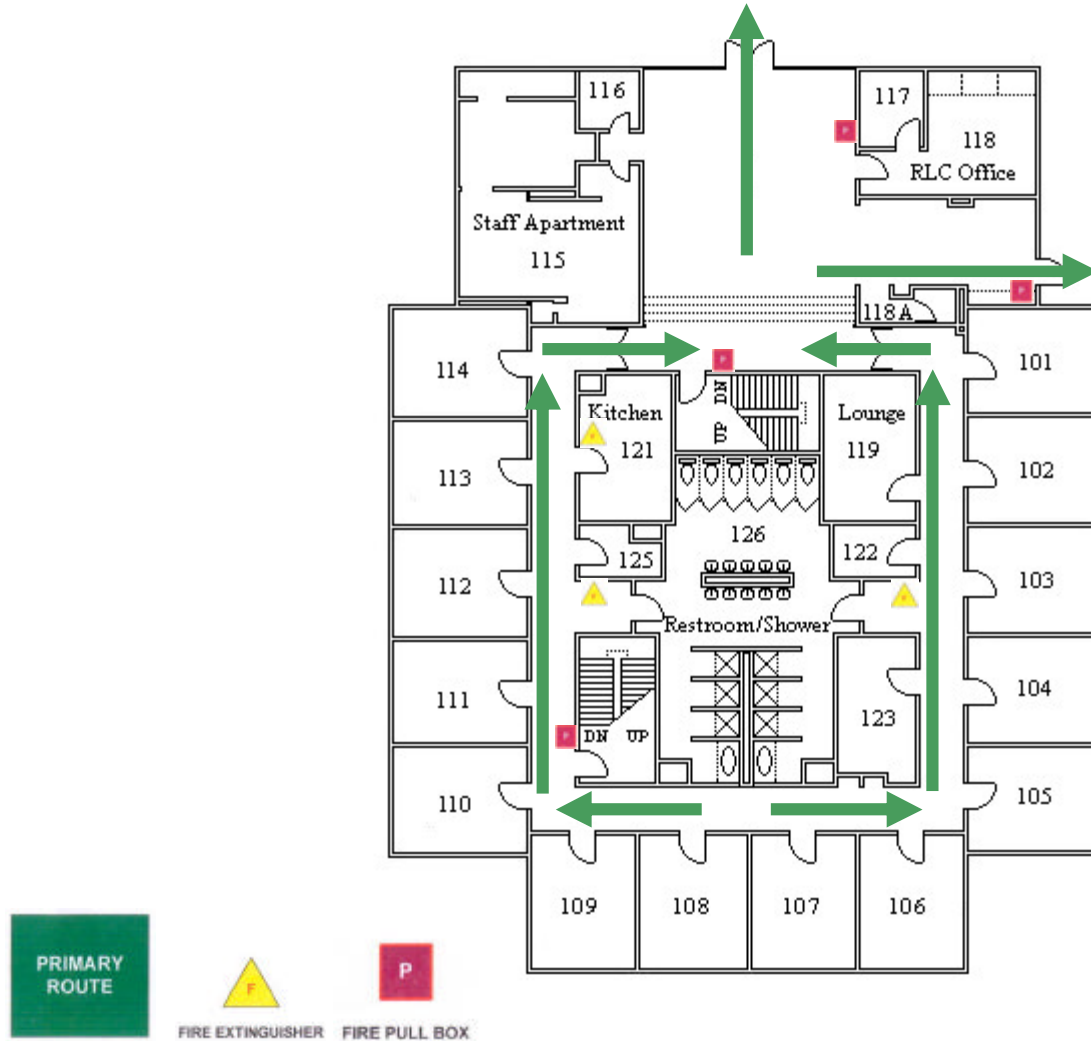


Emergency Evacuation
Assembly Point is
across McMillan St. by
Sixth St. Apartments

For emergency access contact the duty staff pager at
404-533-7197 or the Campus police at 404-894-2500.

Fitten Hall Second Floor


Emergency Evacuation
Assembly Point is
across McMillan St. by
Sixth St. Apartments

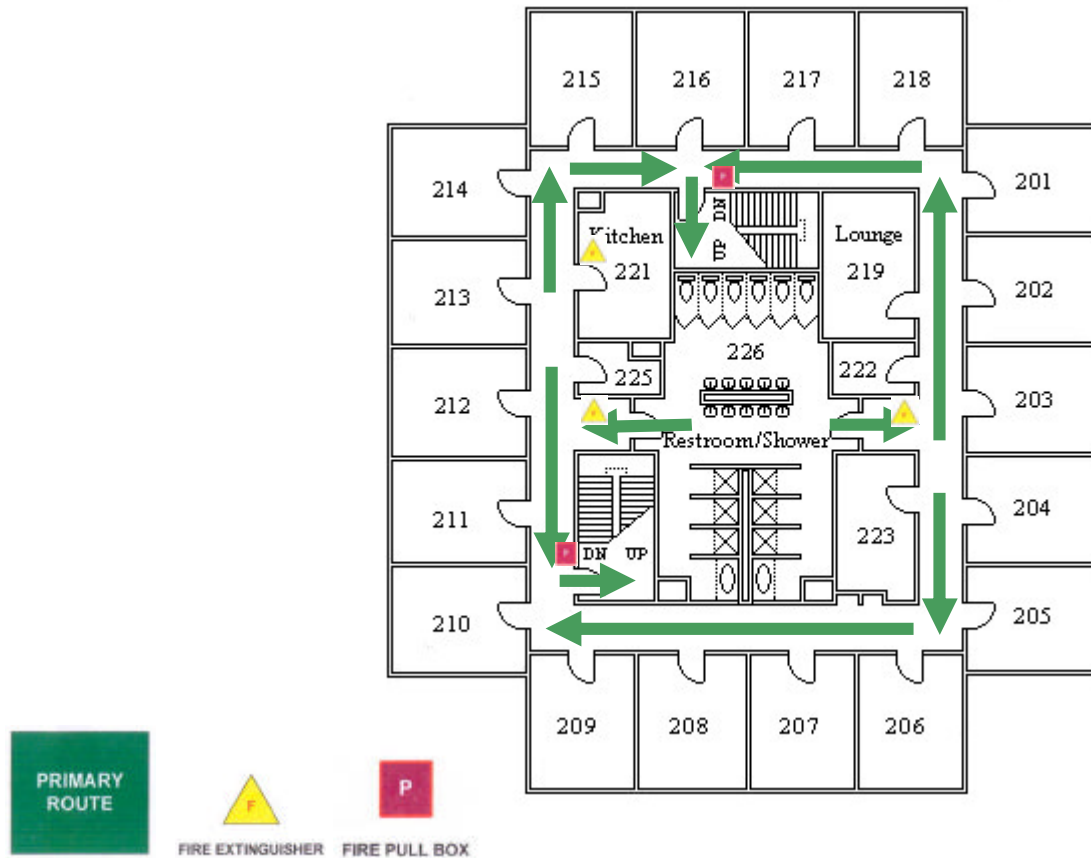

For emergency access contact the duty staff pager at
404-533-7197 or the Campus police at 404-894-2500.

Fitten Hall Third Floor


Emergency Evacuation
Assembly Point is
across McMillan St. by
Sixth St. Apartments

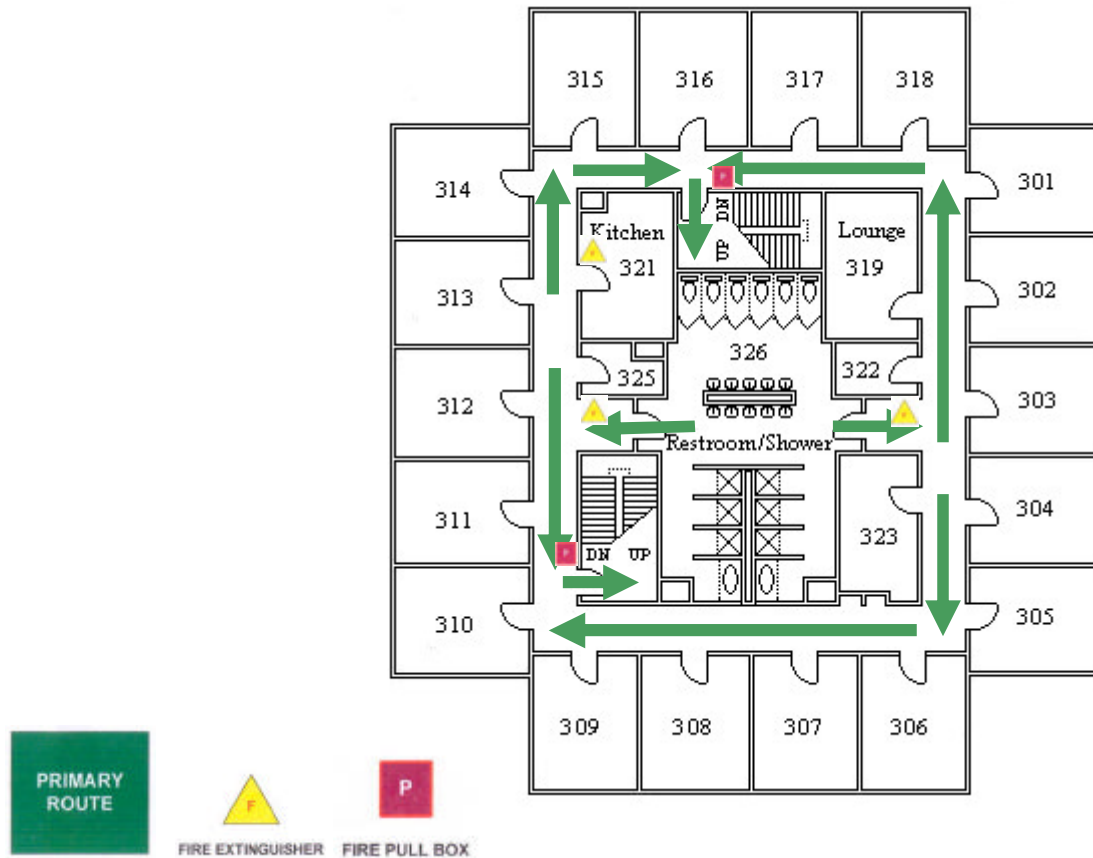

For emergency access contact the duty staff pager at
404-533-7197 or the Campus police at 404-894-2500.

Fitten Hall Fourth Floor

Emergency Evacuation
Assembly Point is
across McMillan St. by
Sixth St. Apartments

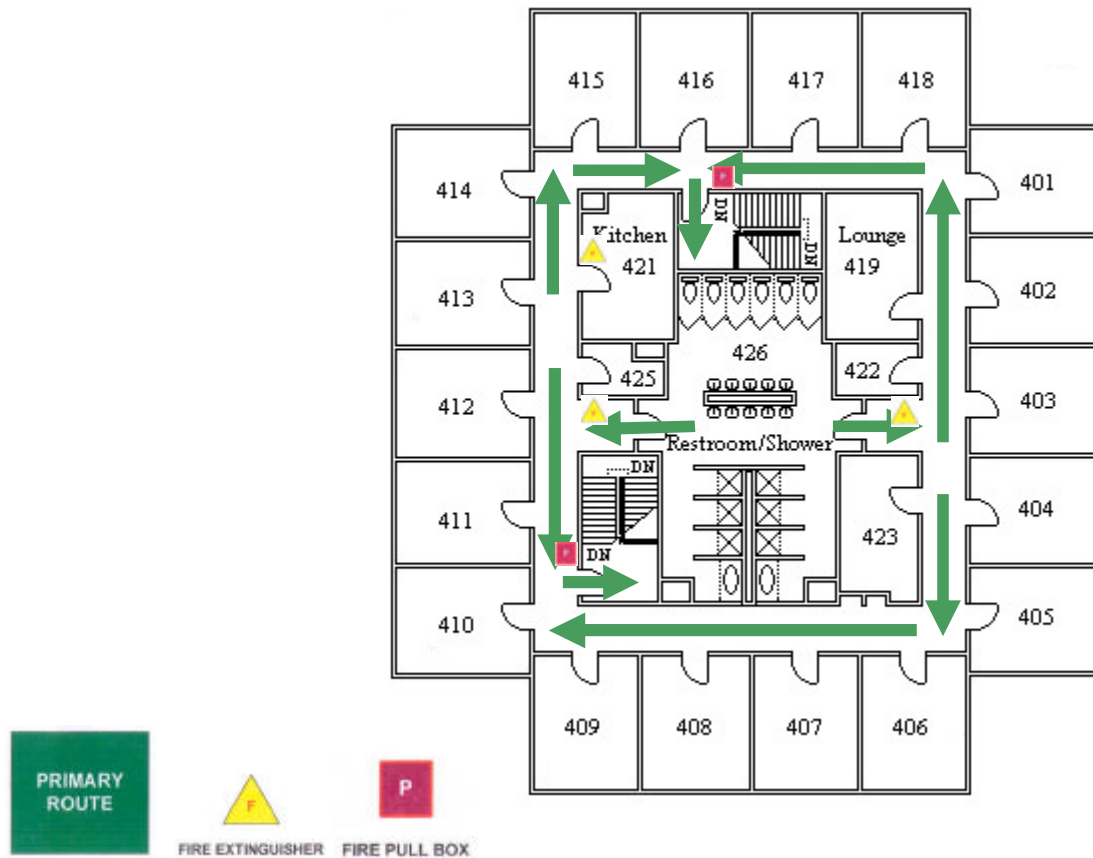

For emergency access contact the duty staff pager at
404-533-7197 or the Campus police at 404-894-2500.