


Harris Hall

First Floor

Emergency Evacuation Assembly Point is the Courtyard by Harrison

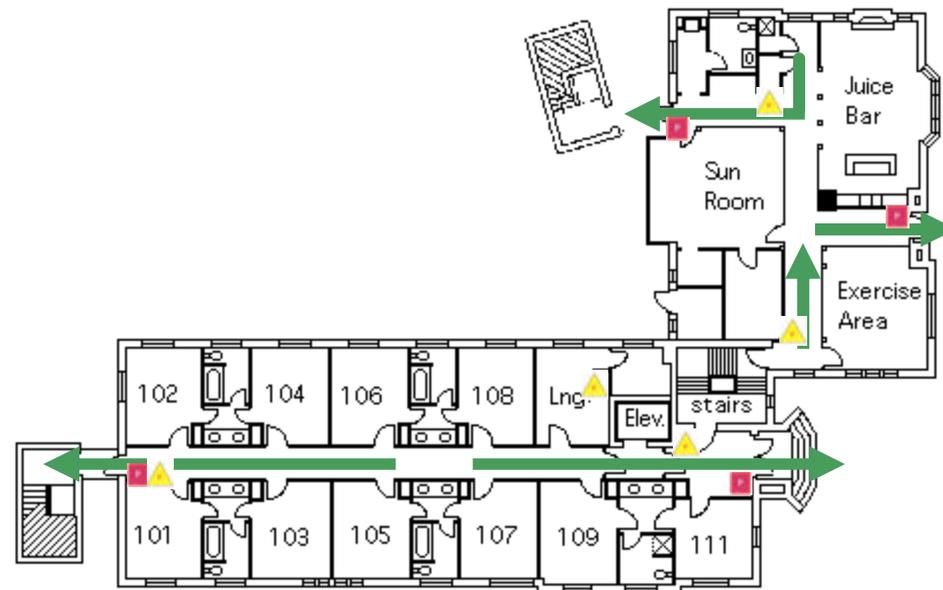

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Harris Hall

Second Floor

Emergency Evacuation Assembly Point is the Courtyard by Harrison



For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Harris Hall

Third Floor

Emergency Evacuation Assembly Point is the Courtyard by Harrison




For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Harris Hall

Fourth Floor

Emergency Evacuation Assembly Point
is the Courtyard by Harrison

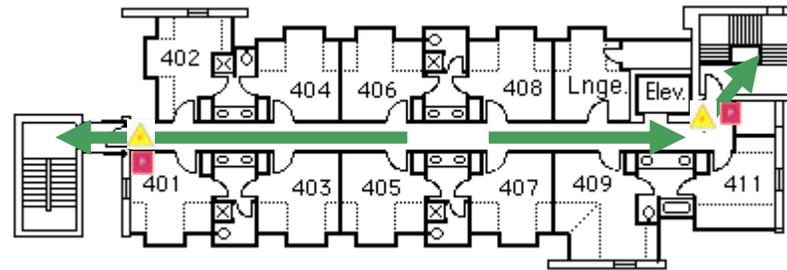

For emergency access contact the duty staff pager at
404-533-7197 or the Campus police at 404-894-2500.