


Hefner Hall

Basement Floor

Emergency Evacuation Assembly Point is the Hefner / Armstrong parking lot

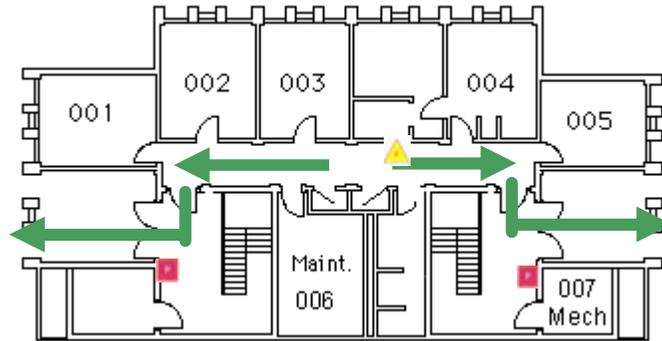

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Hefner Hall

First Floor

Emergency Evacuation Assembly Point is the Hefner / Armstrong parking lot

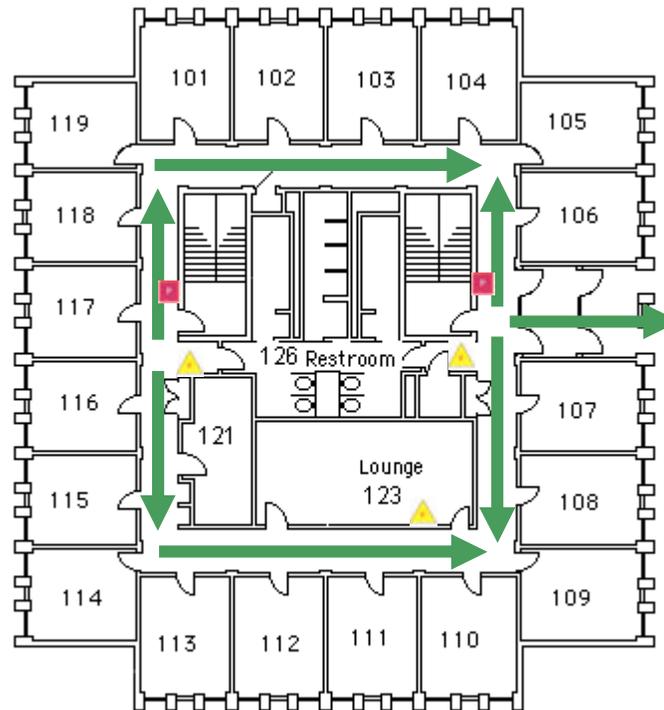

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Hefner Hall

Second Floor

Emergency Evacuation Assembly Point is the Hefner / Armstrong parking lot

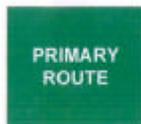

FIRE EXTINGUISHER




FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Hefner Hall

Third Floor

Emergency Evacuation Assembly Point is the Hefner / Armstrong parking lot

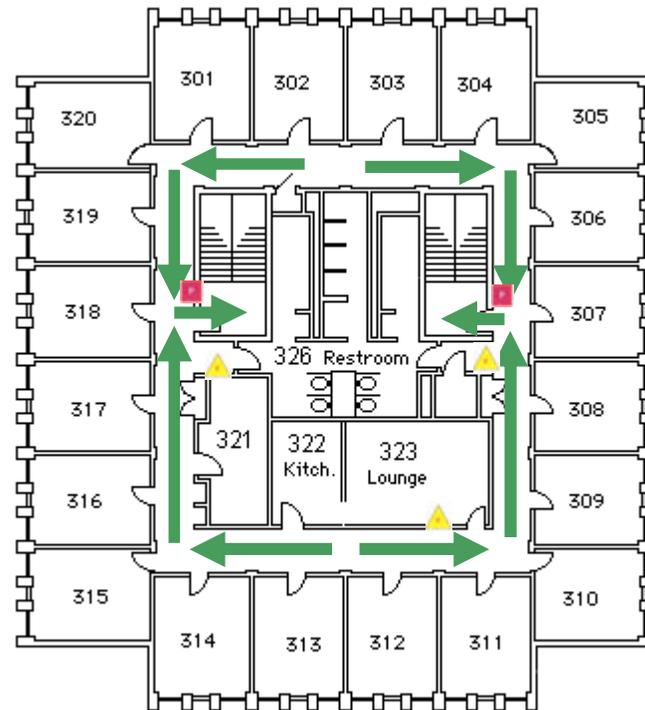

FIRE EXTINGUISHER FIRE PULL BOX

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.