


# Hopkins Hall

## Basement Floor

Emergency Evacuation  
Assembly Point is in the  
Courtyard by Perry Hall

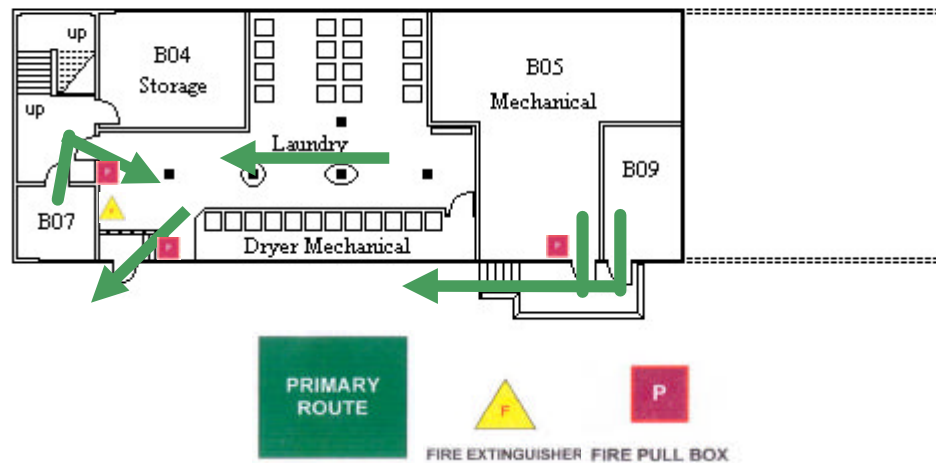


For emergency access  
contact the duty staff pager at  
404-533-7197 or the Campus  
police at 404-894-2500.

# Hopkins Hall

## First Floor

Emergency Evacuation  
Assembly Point is in the  
Courtyard by Perry Hall

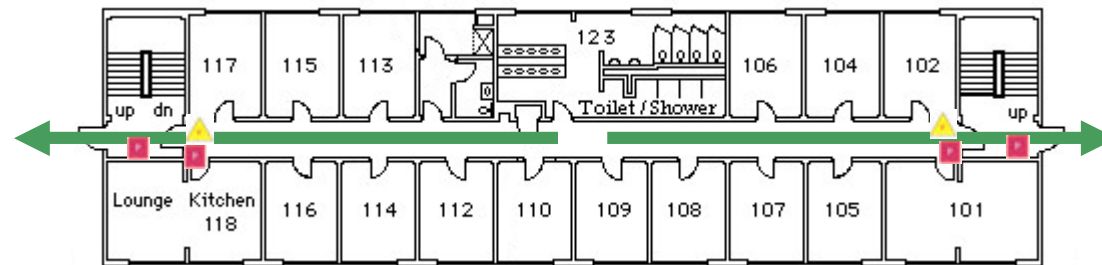


For emergency access  
contact the duty staff pager at  
404-533-7197 or the Campus  
police at 404-894-2500.

# Hopkins Hall

## Second Floor

Emergency Evacuation  
Assembly Point is in the  
Courtyard by Perry Hall

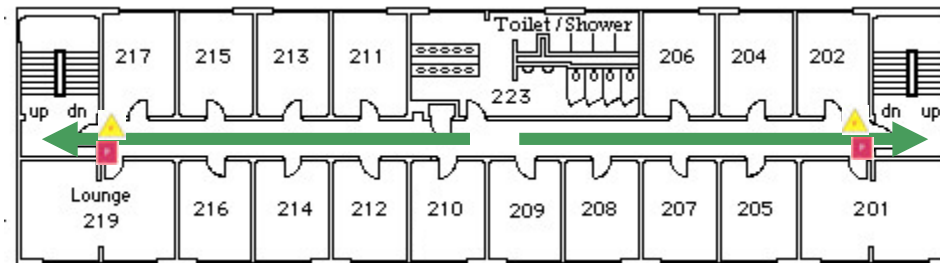


For emergency access  
contact the duty staff pager at  
404-533-7197 or the Campus  
police at 404-894-2500.

# Hopkins Hall

## Third Floor

Emergency Evacuation  
Assembly Point is in the  
Courtyard by Perry Hall

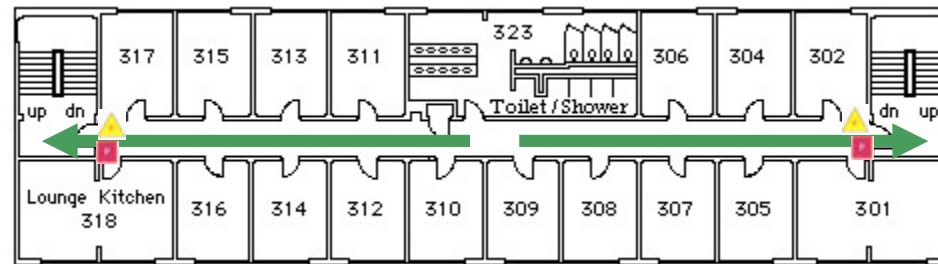


For emergency access  
contact the duty staff pager at  
404-533-7197 or the Campus  
police at 404-894-2500.

# Hopkins Hall

## Fourth Floor

Emergency Evacuation  
Assembly Point is in the  
Courtyard by Perry Hall

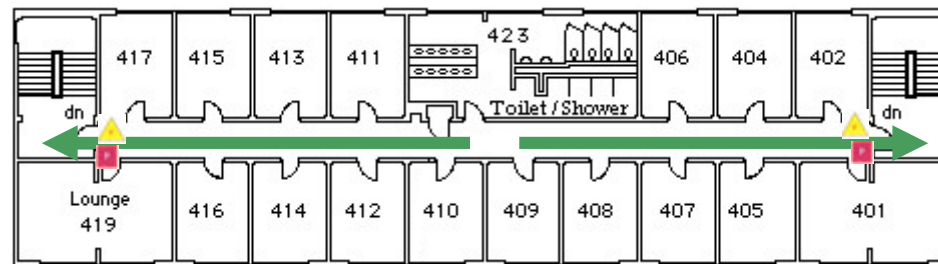

For emergency access  
contact the duty staff pager at  
404-533-7197 or the Campus  
police at 404-894-2500.