


Smith Hall Basement Floor

Emergency Evacuation Assembly Point locations :
Floors 1 & 2 – grassy area in front of Howell
Floor 3 – Smith Parking Lot
Floor 4 – Harris Patio

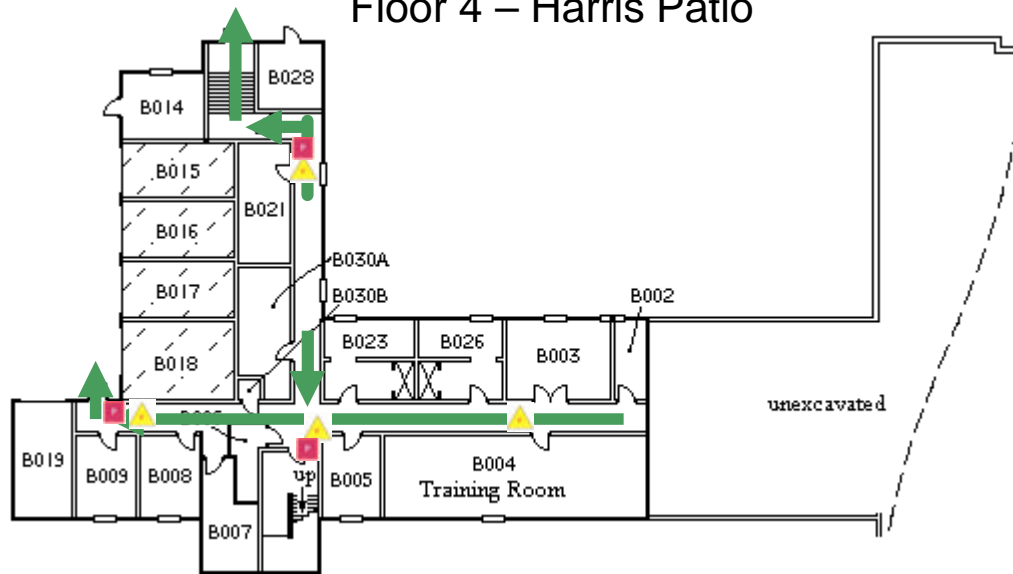


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Smith Hall

First Floor

Emergency Evacuation Assembly Point locations :
Floors 1 & 2 – grassy area in front of Howell
Floor 3 – Smith Parking Lot
Floor 4 – Harris Patio

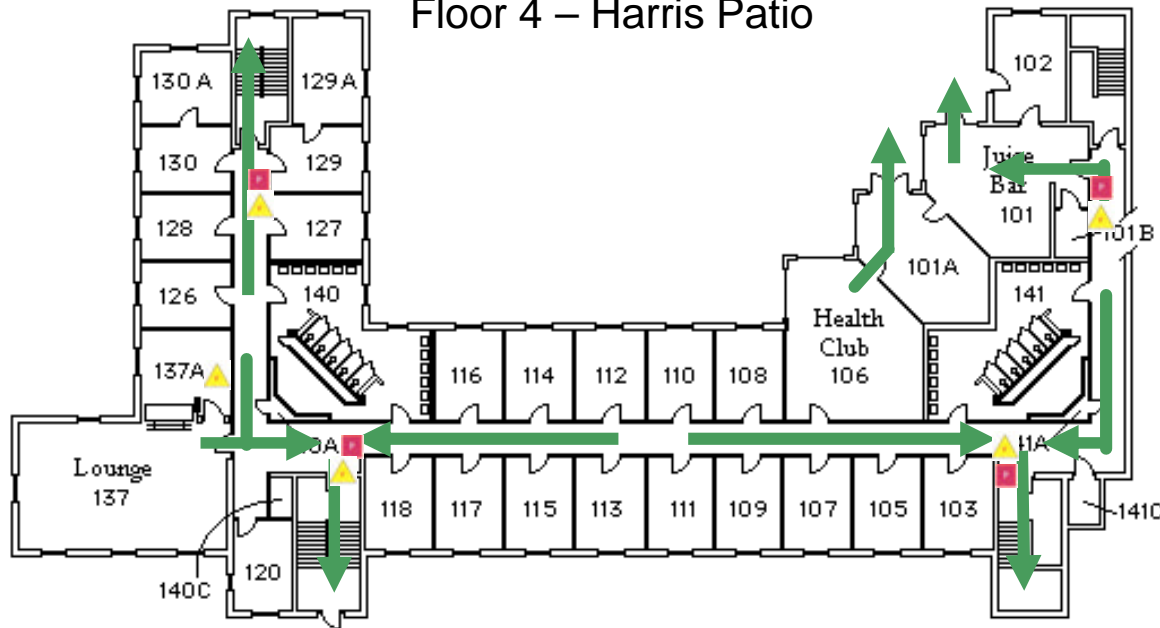

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Smith Hall

Second Floor

Emergency Evacuation Assembly Point locations :
Floors 1 & 2 – grassy area in front of Howell
Floor 3 – Smith Parking Lot
Floor 4 – Harris Patio



For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Smith Hall Third Floor


Emergency Evacuation Assembly Point locations :
Floors 1 & 2 – grassy area in front of Howell
Floor 3 – Smith Parking Lot
Floor 4 – Harris Patio



For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Smith Hall Fourth Floor

Emergency Evacuation Assembly Point locations :
Floors 1 & 2 – grassy area in front of Howell
Floor 3 – Smith Parking Lot
Floor 4 – Harris Patio

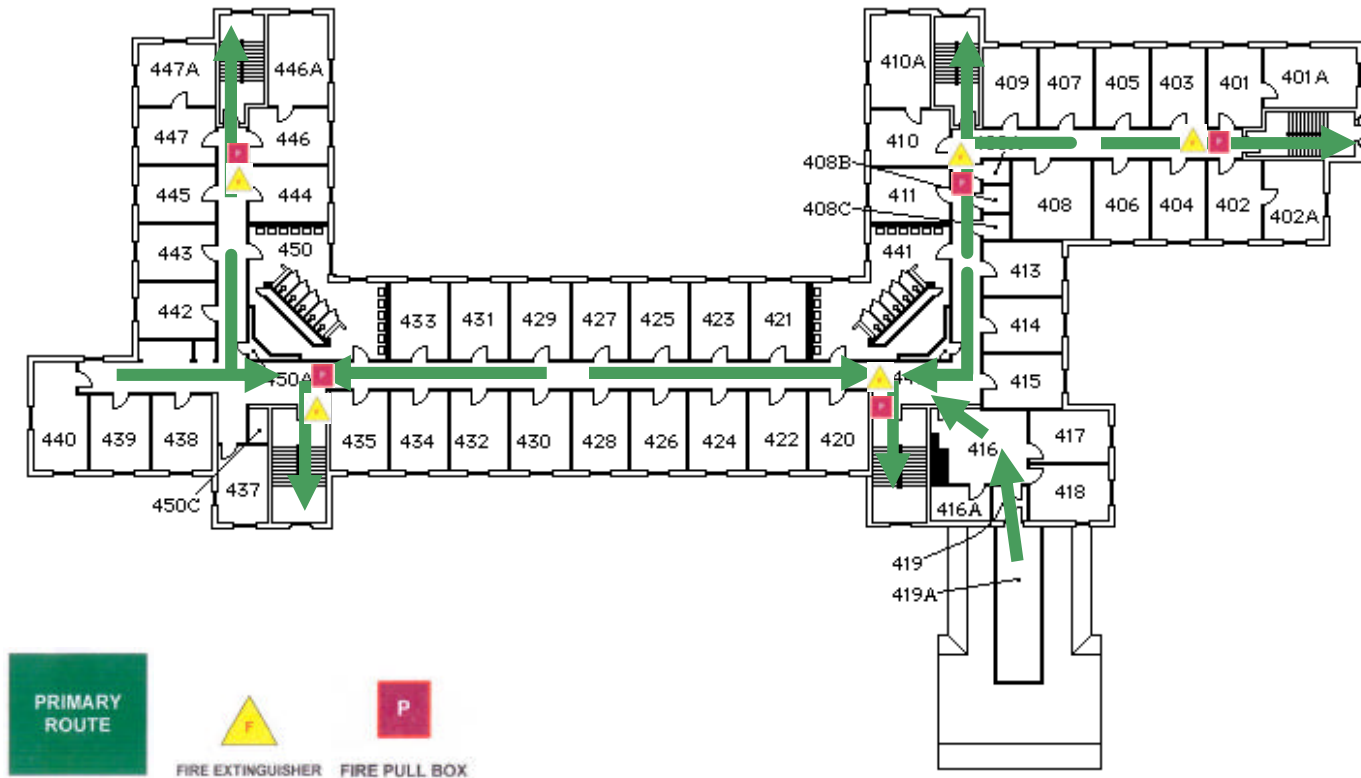

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.