


# Tenth and Home Apts. - Bldg B

## Ground Floor

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

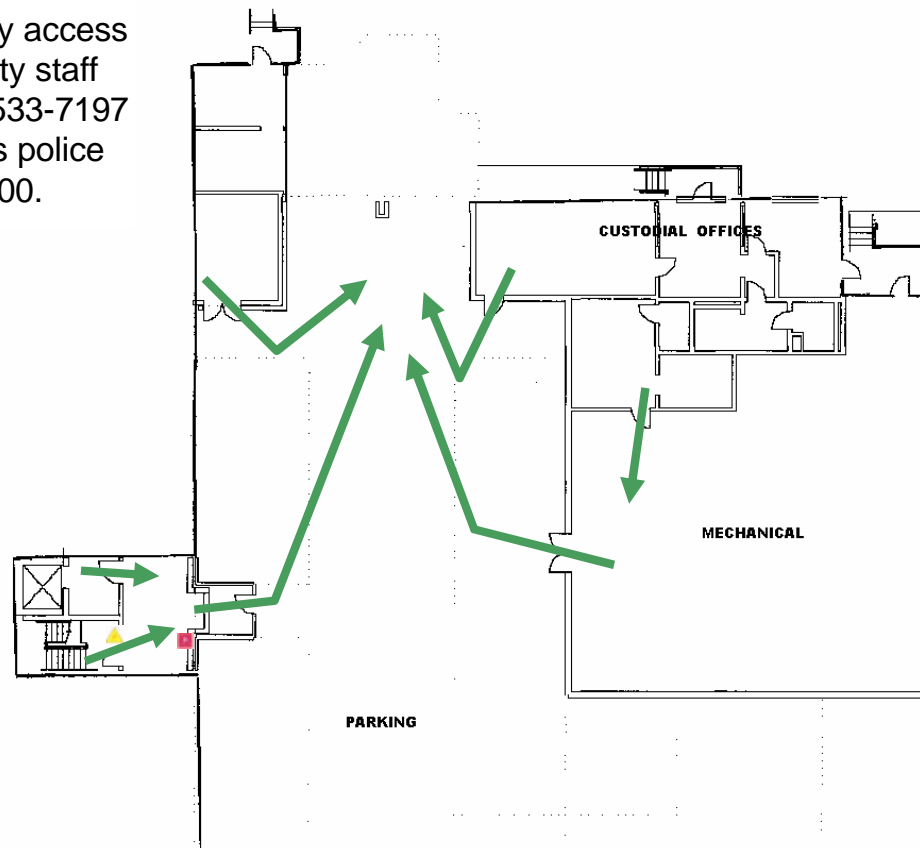

Emergency Evacuation Assembly Point is at the GLC Courtyard




# Tenth and Home Apts. - Bldg B

## First Floor

For emergency access  
contact the duty staff  
pager at 404-533-7197  
or the Campus police  
at 404-894-2500.

CONC. RETAINING WALL

Emergency Evacuation Assembly  
Point is at the GLC Courtyard

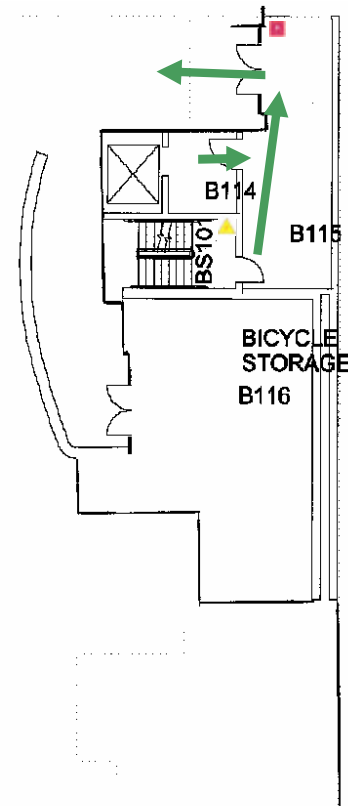


FIRE EXTINGUISHER FIRE PULL BOX

# Tenth and Home Apts. - Bldg B

## Second Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

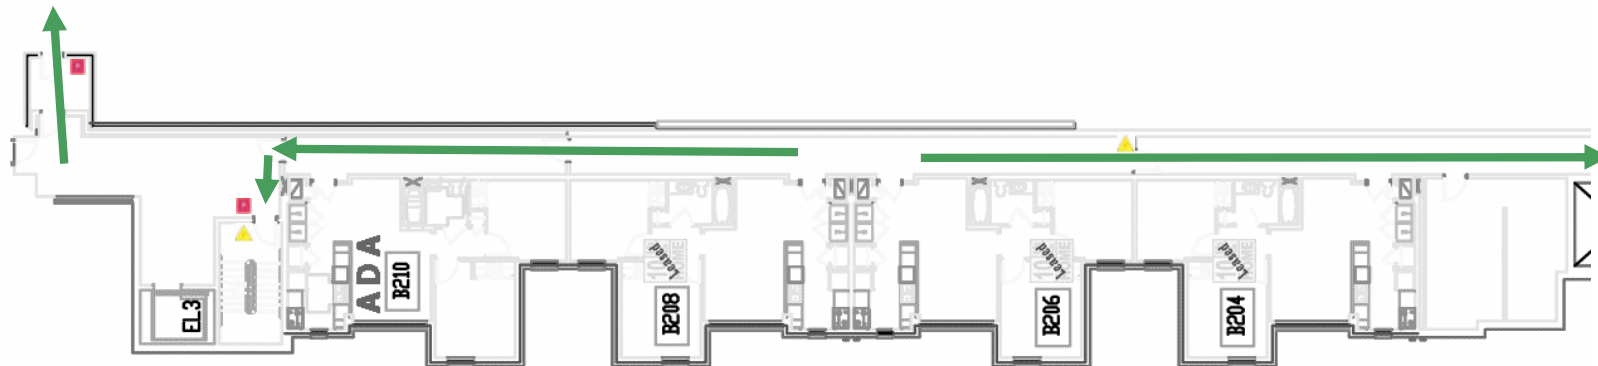


# Tenth and Home Apts. - Bldg B

## Third Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

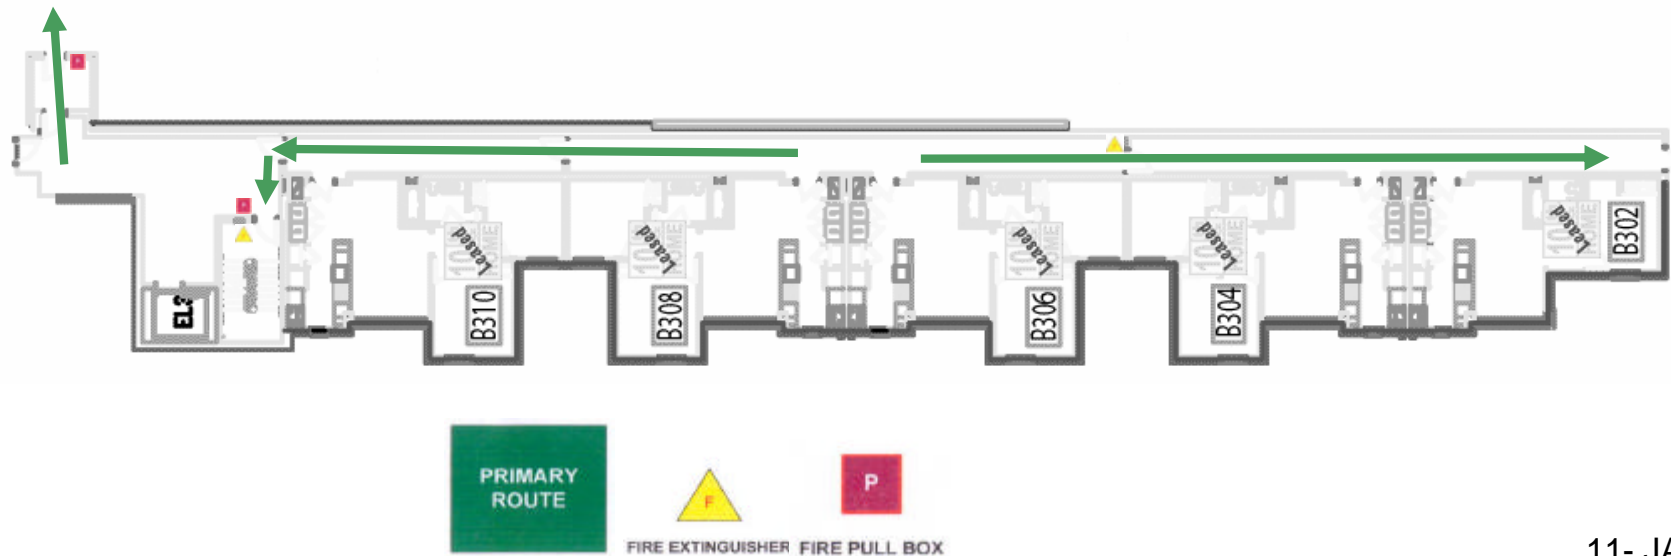


# Tenth and Home Apts. - Bldg B

## Fourth Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

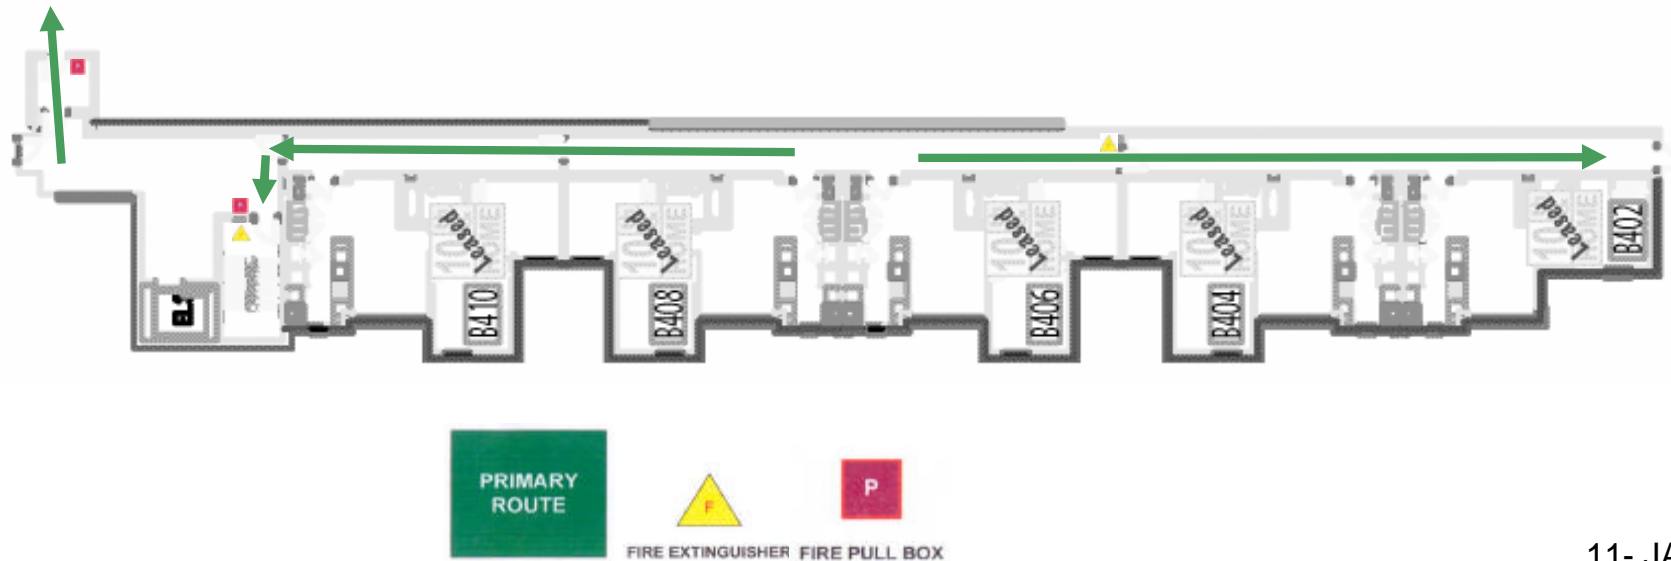


# Tenth and Home Apts. - Bldg B

## Fifth Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

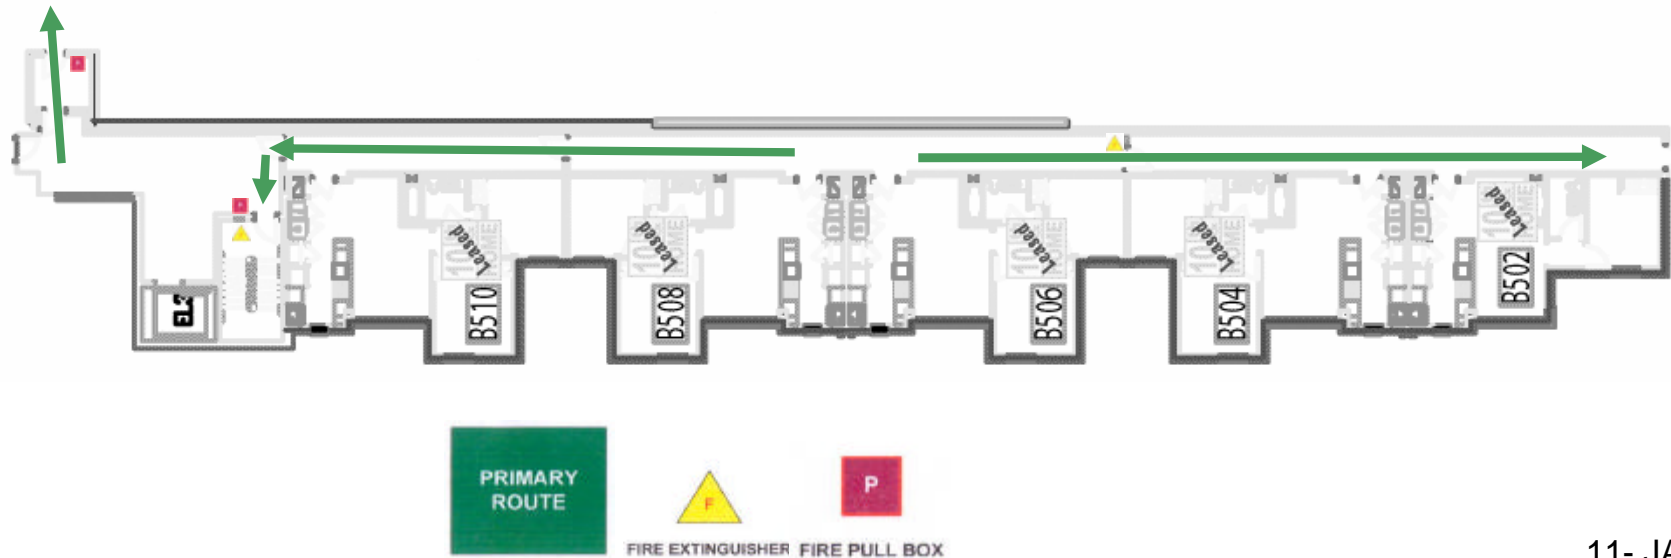


# Tenth and Home Apts. - Bldg B

## Sixth Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

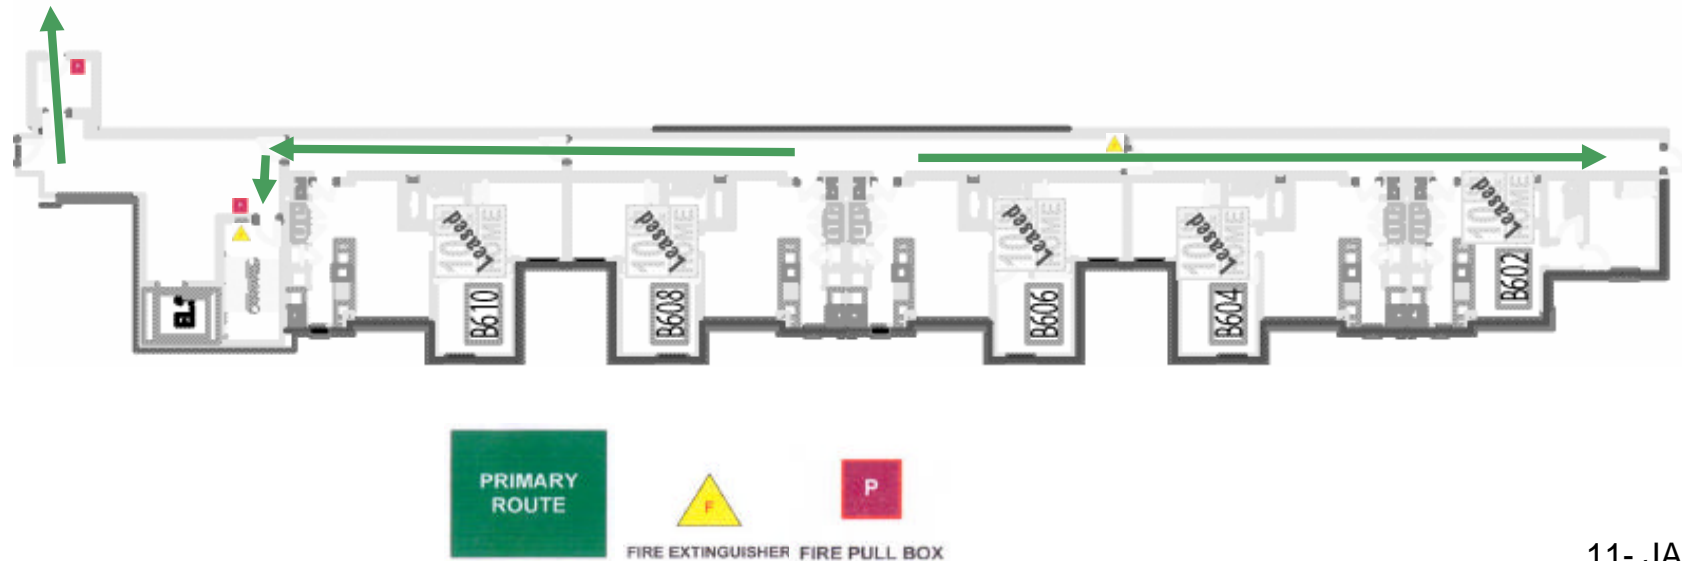

# Tenth and Home Apts. - Bldg B

## Seventh Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

