


# Tenth and Home Apts. - Bldg C

## First Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

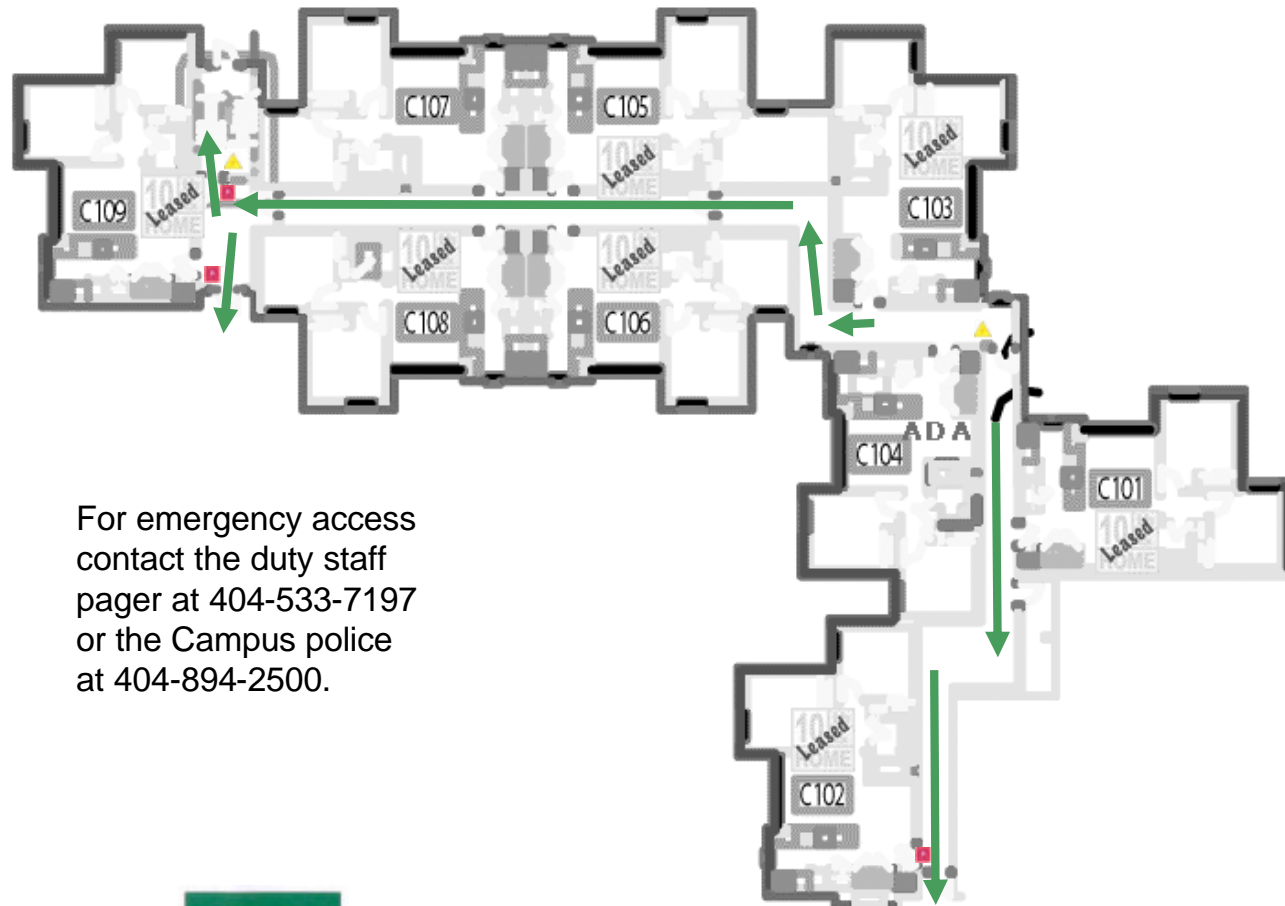


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.



# Tenth and Home Apts. - Bldg C

## Second Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

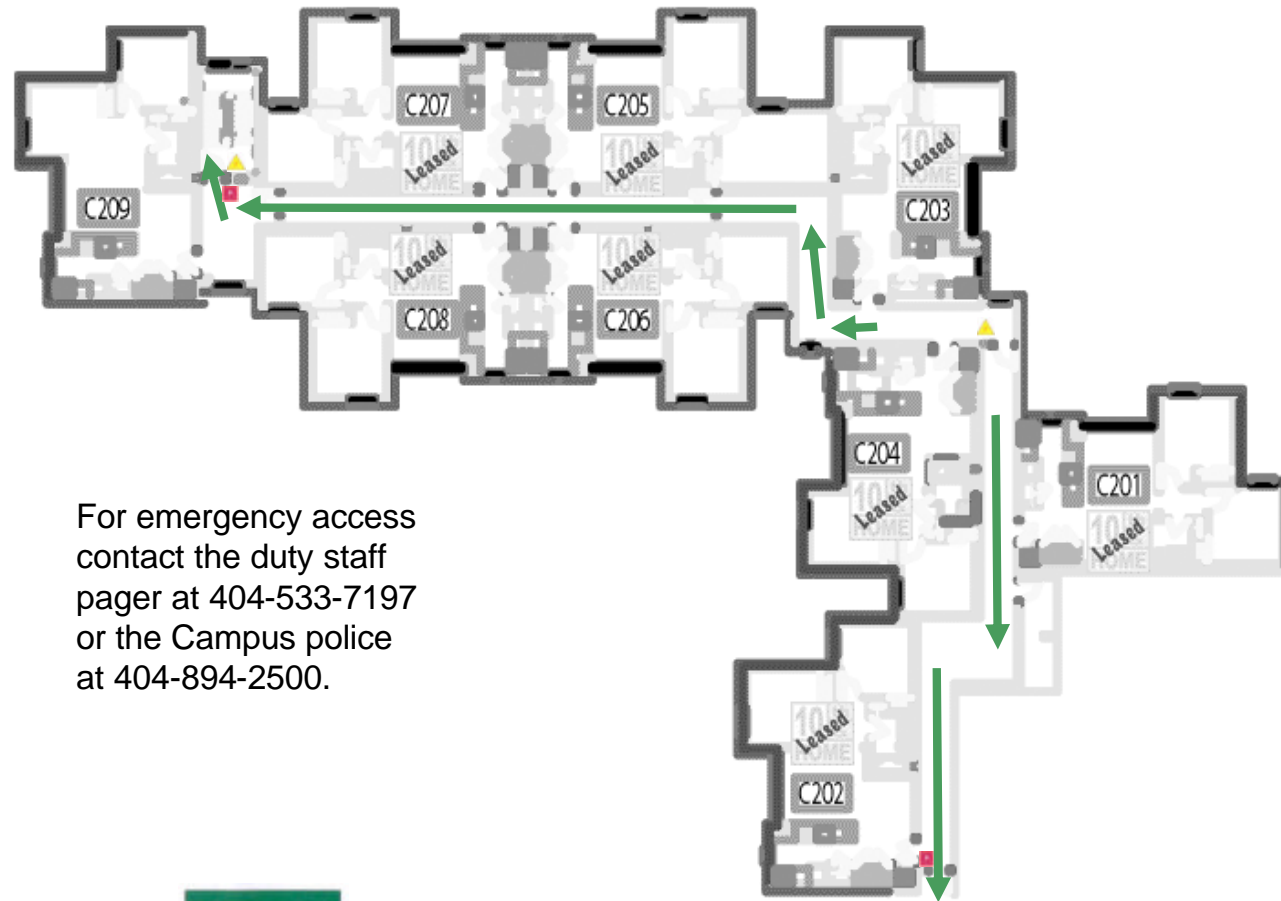


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.



# Tenth and Home Apts. - Bldg C

## Third Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

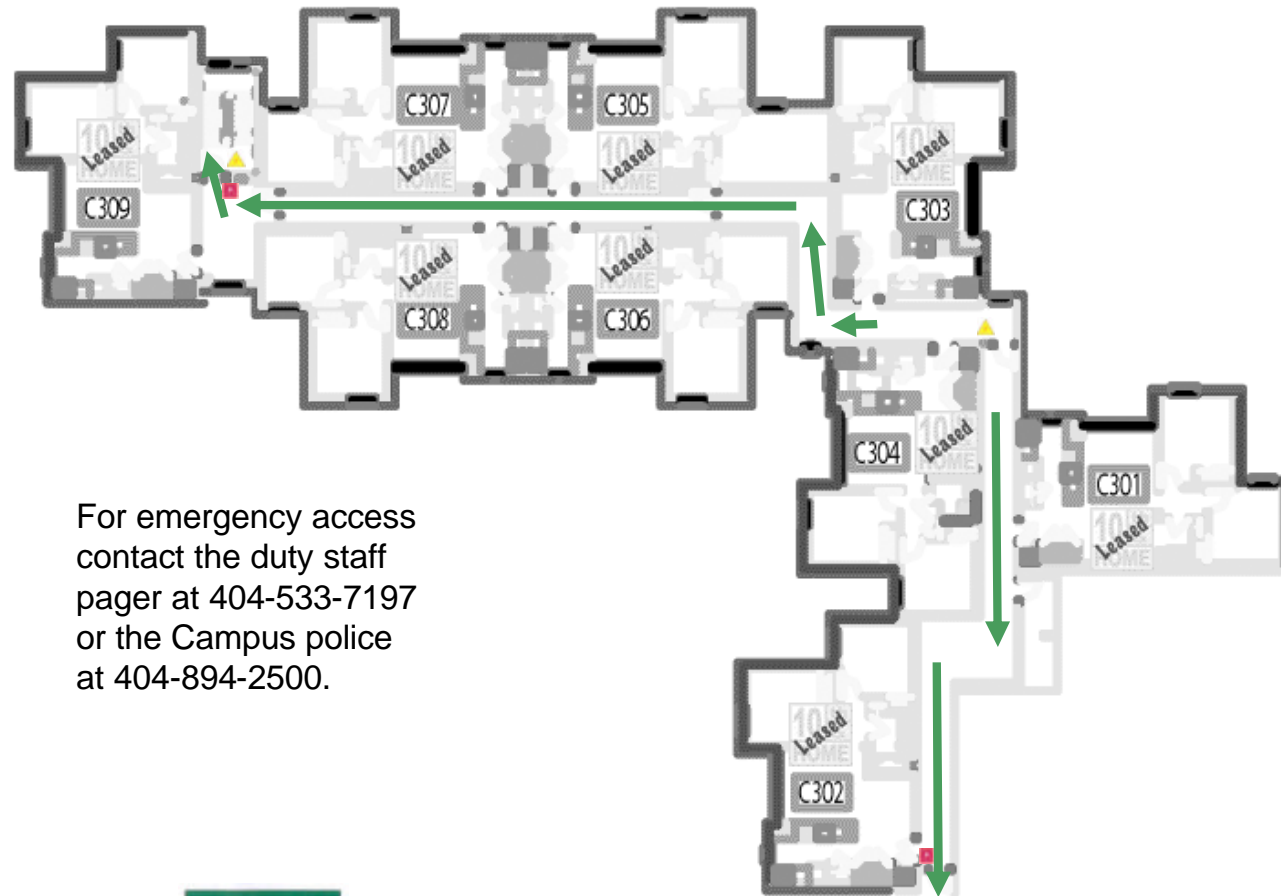


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.



# Tenth and Home Apts. - Bldg C

## Fourth Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

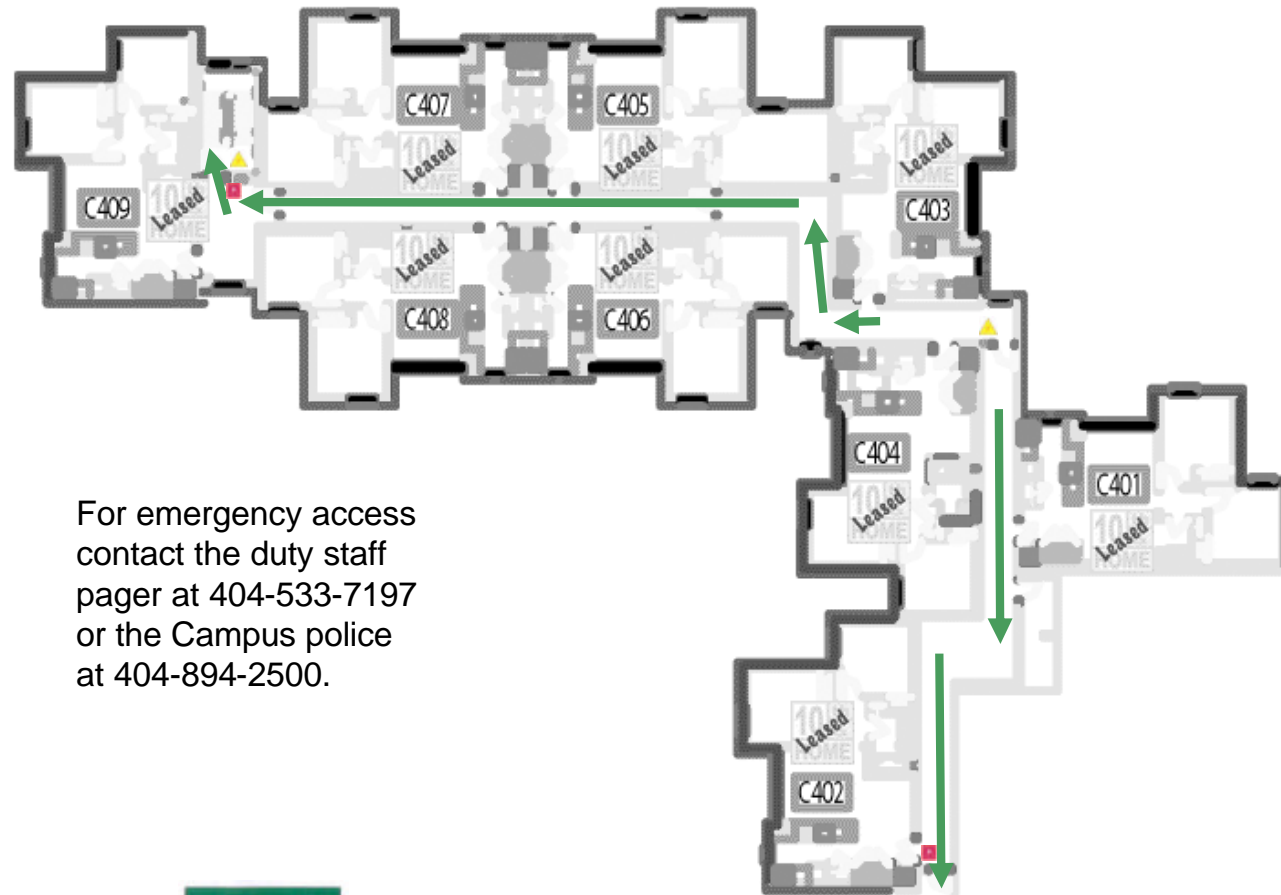


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.



# Tenth and Home Apts. - Bldg C

## Fifth Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

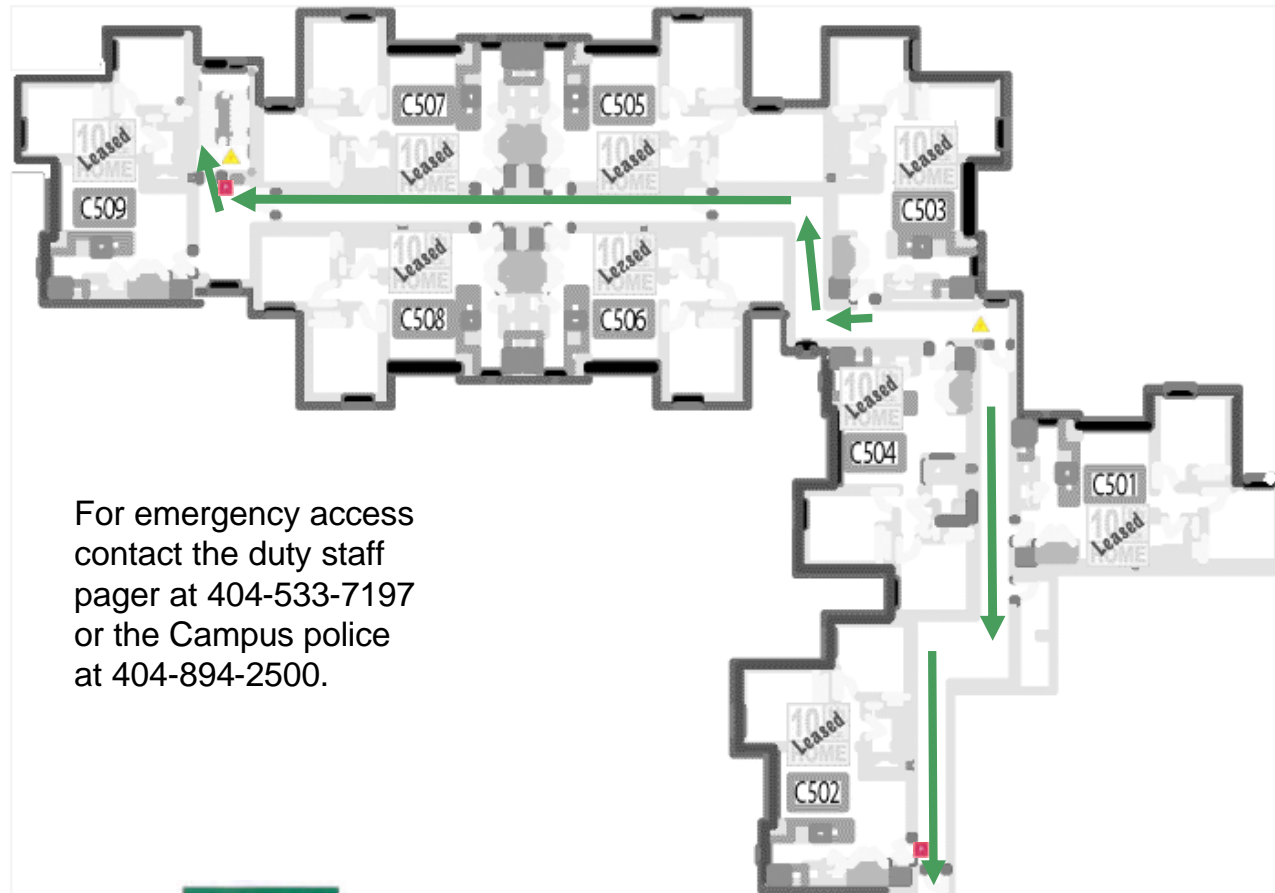


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.



# Tenth and Home Apts. - Bldg C

## Sixth Floor

Emergency Evacuation Assembly Point is at the GLC Courtyard

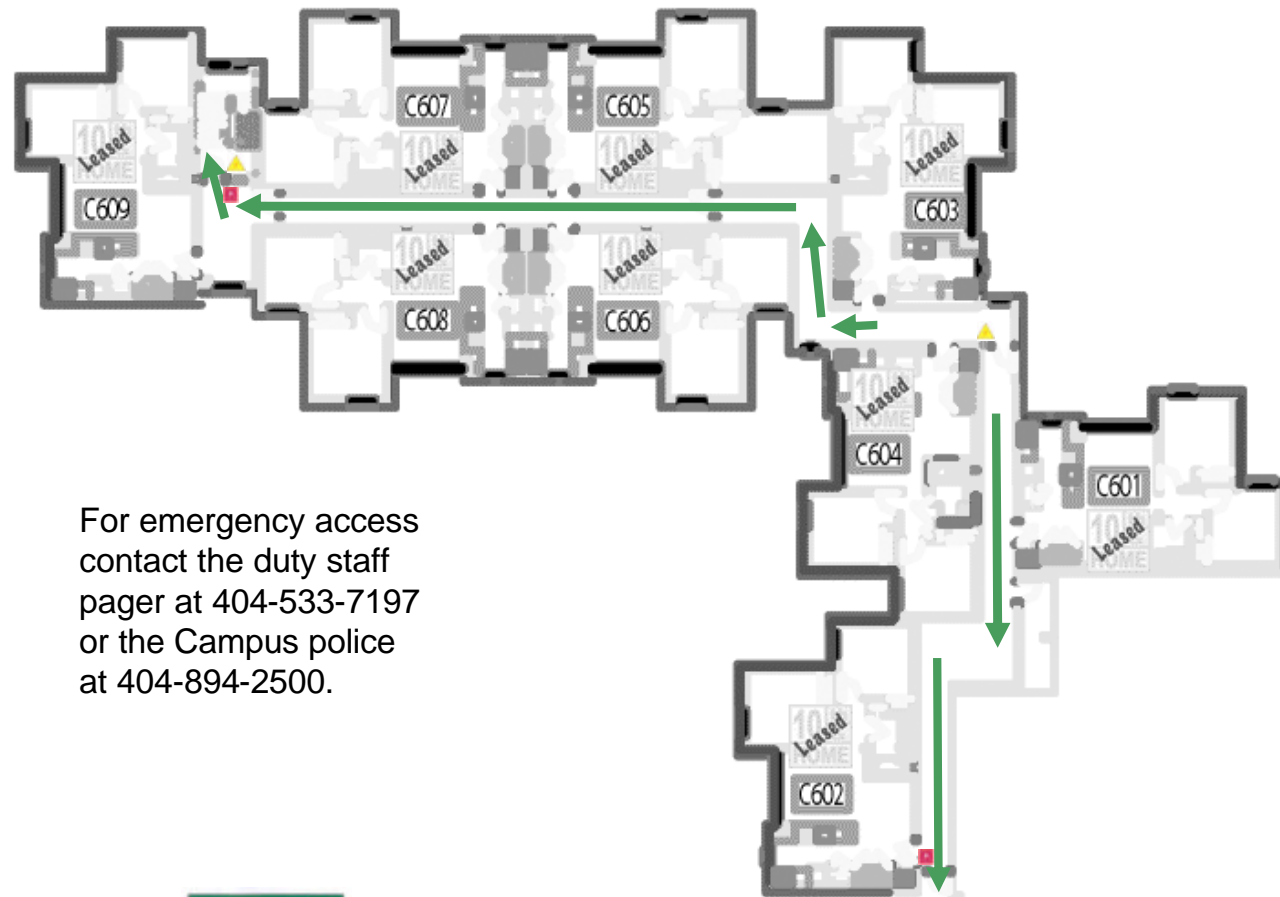

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

