

# Tenth and Home Apts. - Bldg E

## First Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.




# Tenth and Home Apts. - Bldg E

## Second Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

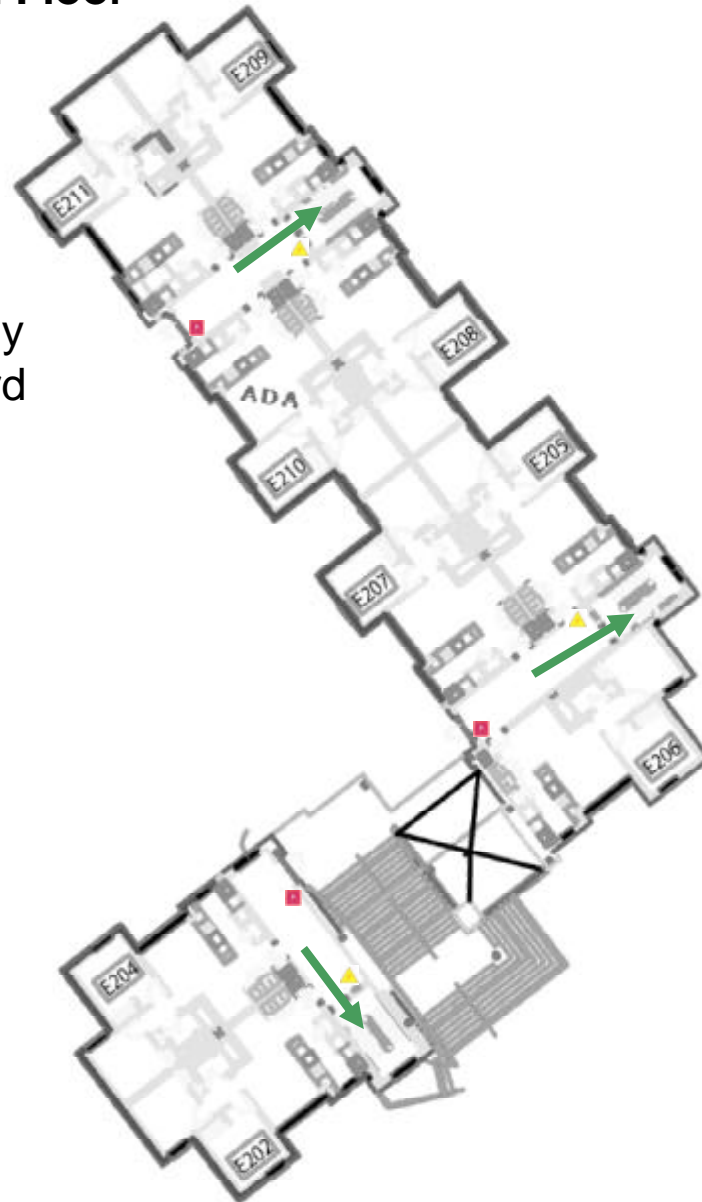


# Tenth and Home Apts. - Bldg E

## Third Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

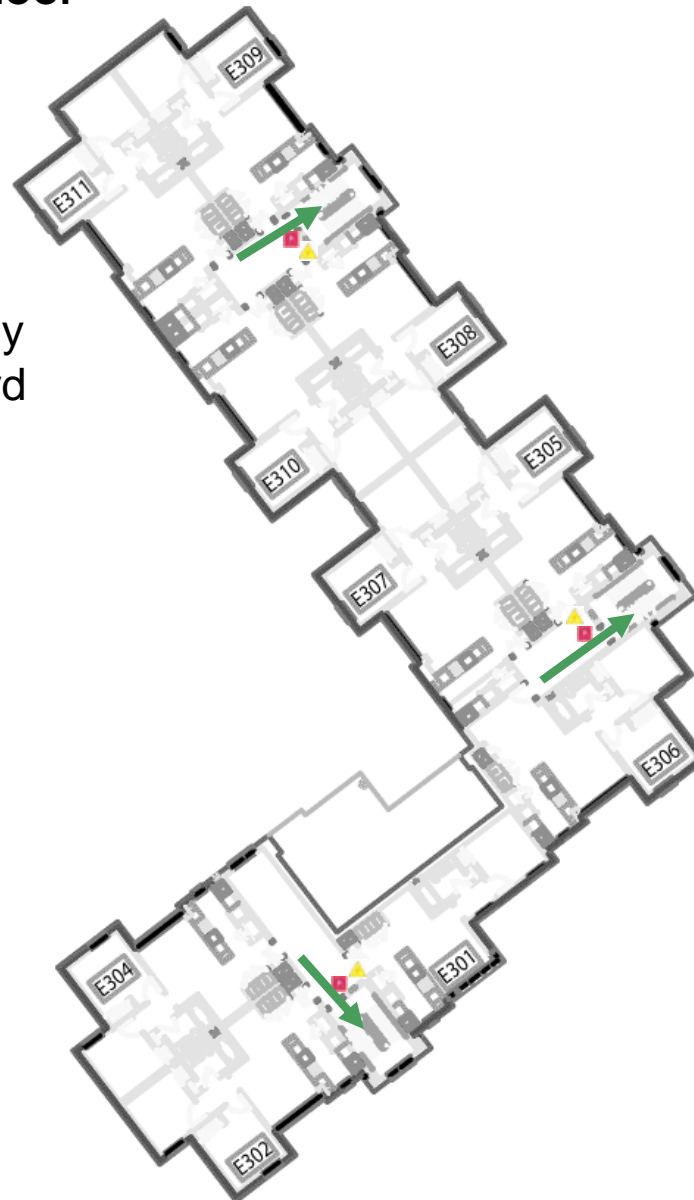

# Tenth and Home Apts. - Bldg E

## Fourth Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

