


# Tenth and Home Apts. - Bldg G

## First Floor

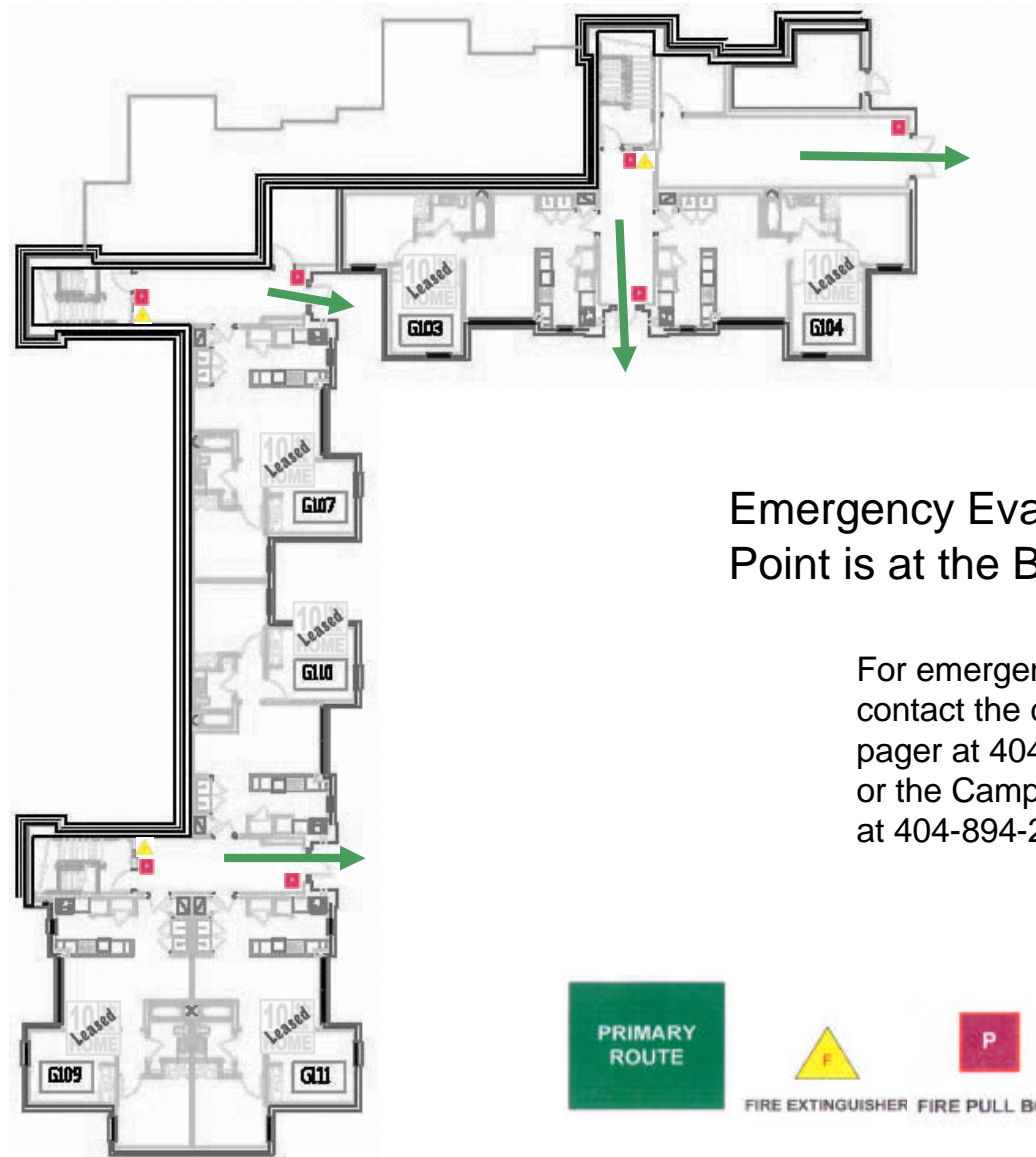


Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

# Tenth and Home Apts. - Bldg G

## Second Floor

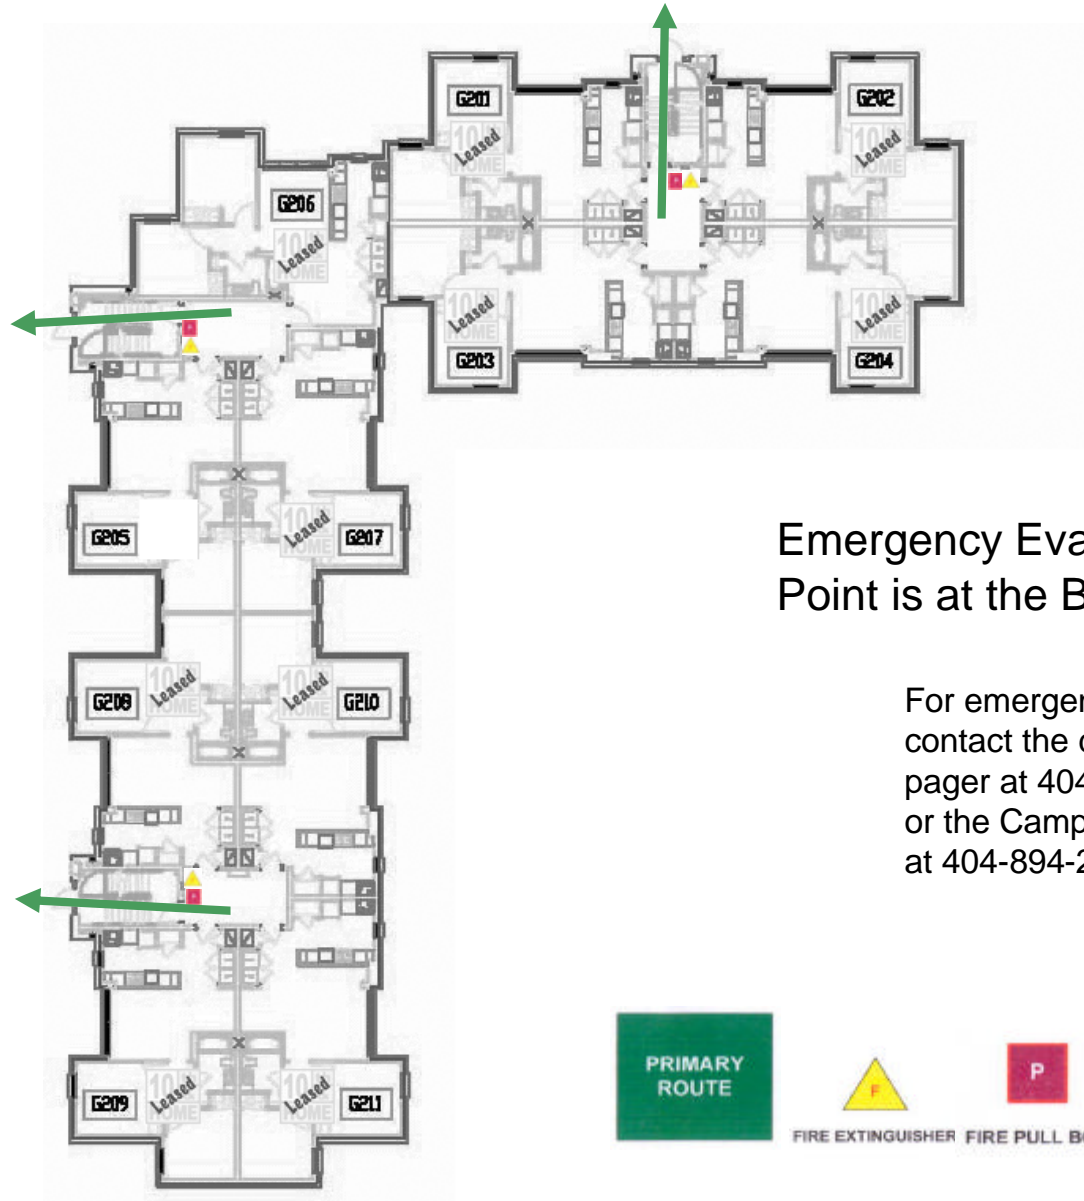


Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

# Tenth and Home Apts. - Bldg G

## Third Floor

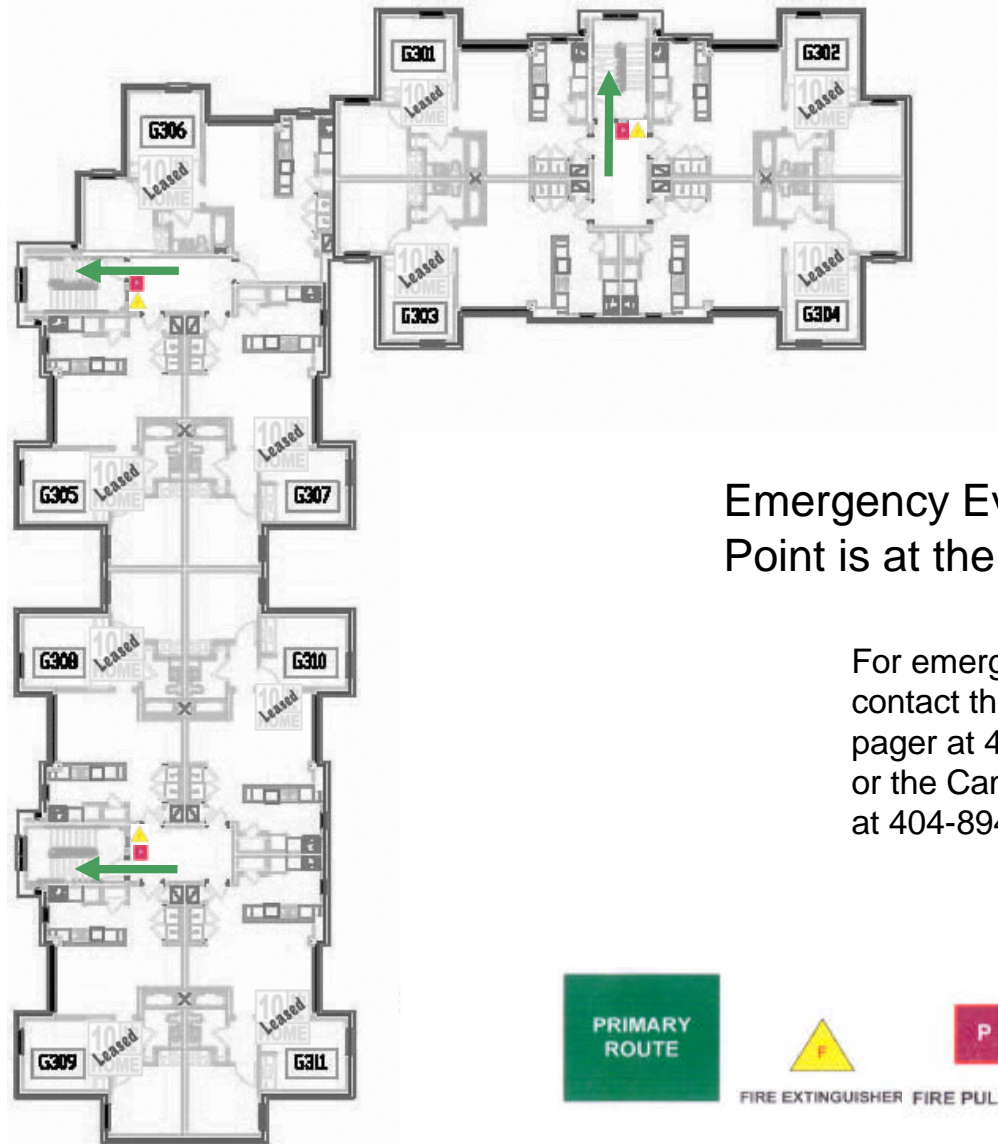


Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.



# Tenth and Home Apts. - Bldg G

## Fourth Floor

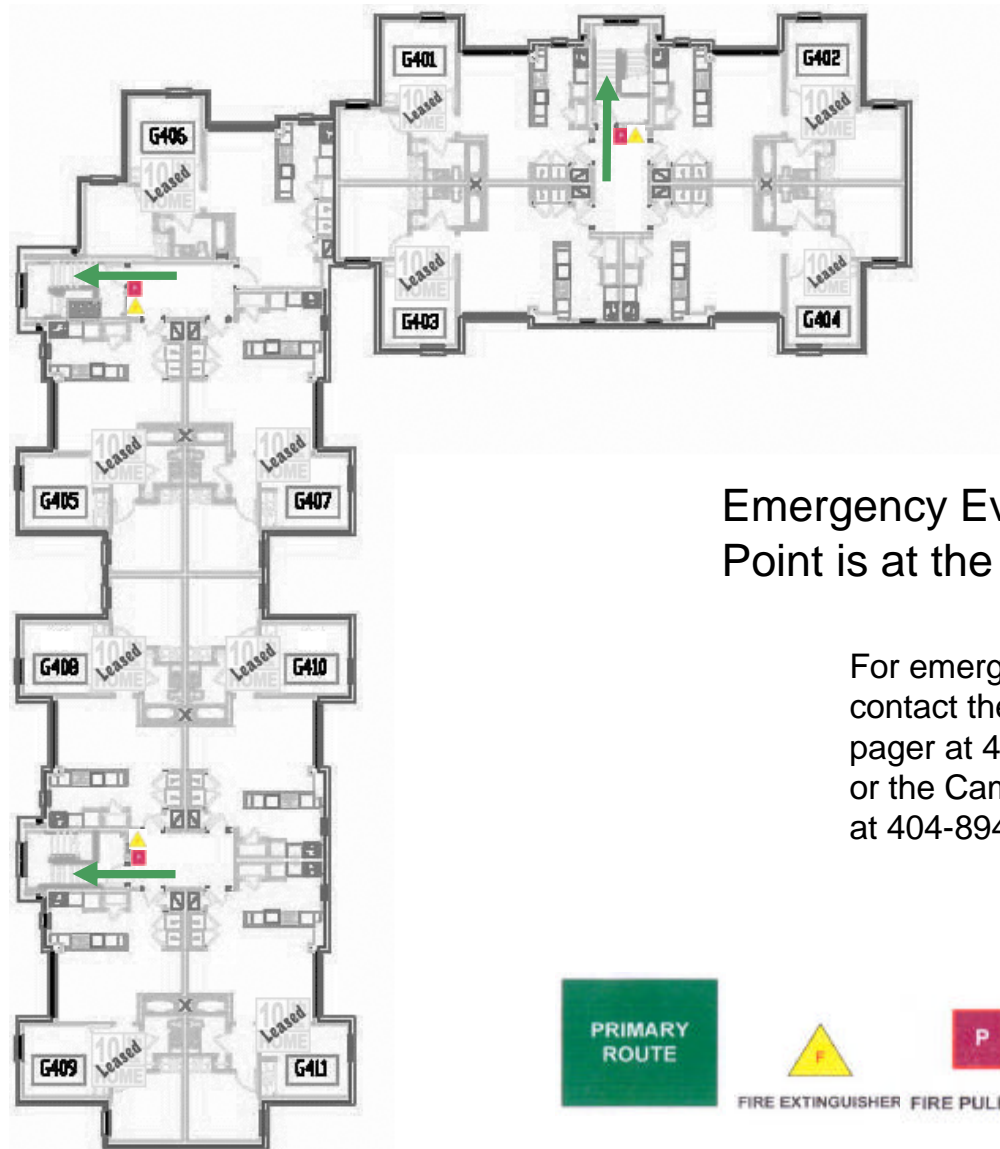

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

