

Tenth and Home Apts. - Bldg A

First Floor


Emergency Evacuation Assembly
Point is at the GLC Courtyard



Tenth and Home Apts. - Bldg A

Second Floor


Emergency Evacuation Assembly
Point is at the GLC Courtyard

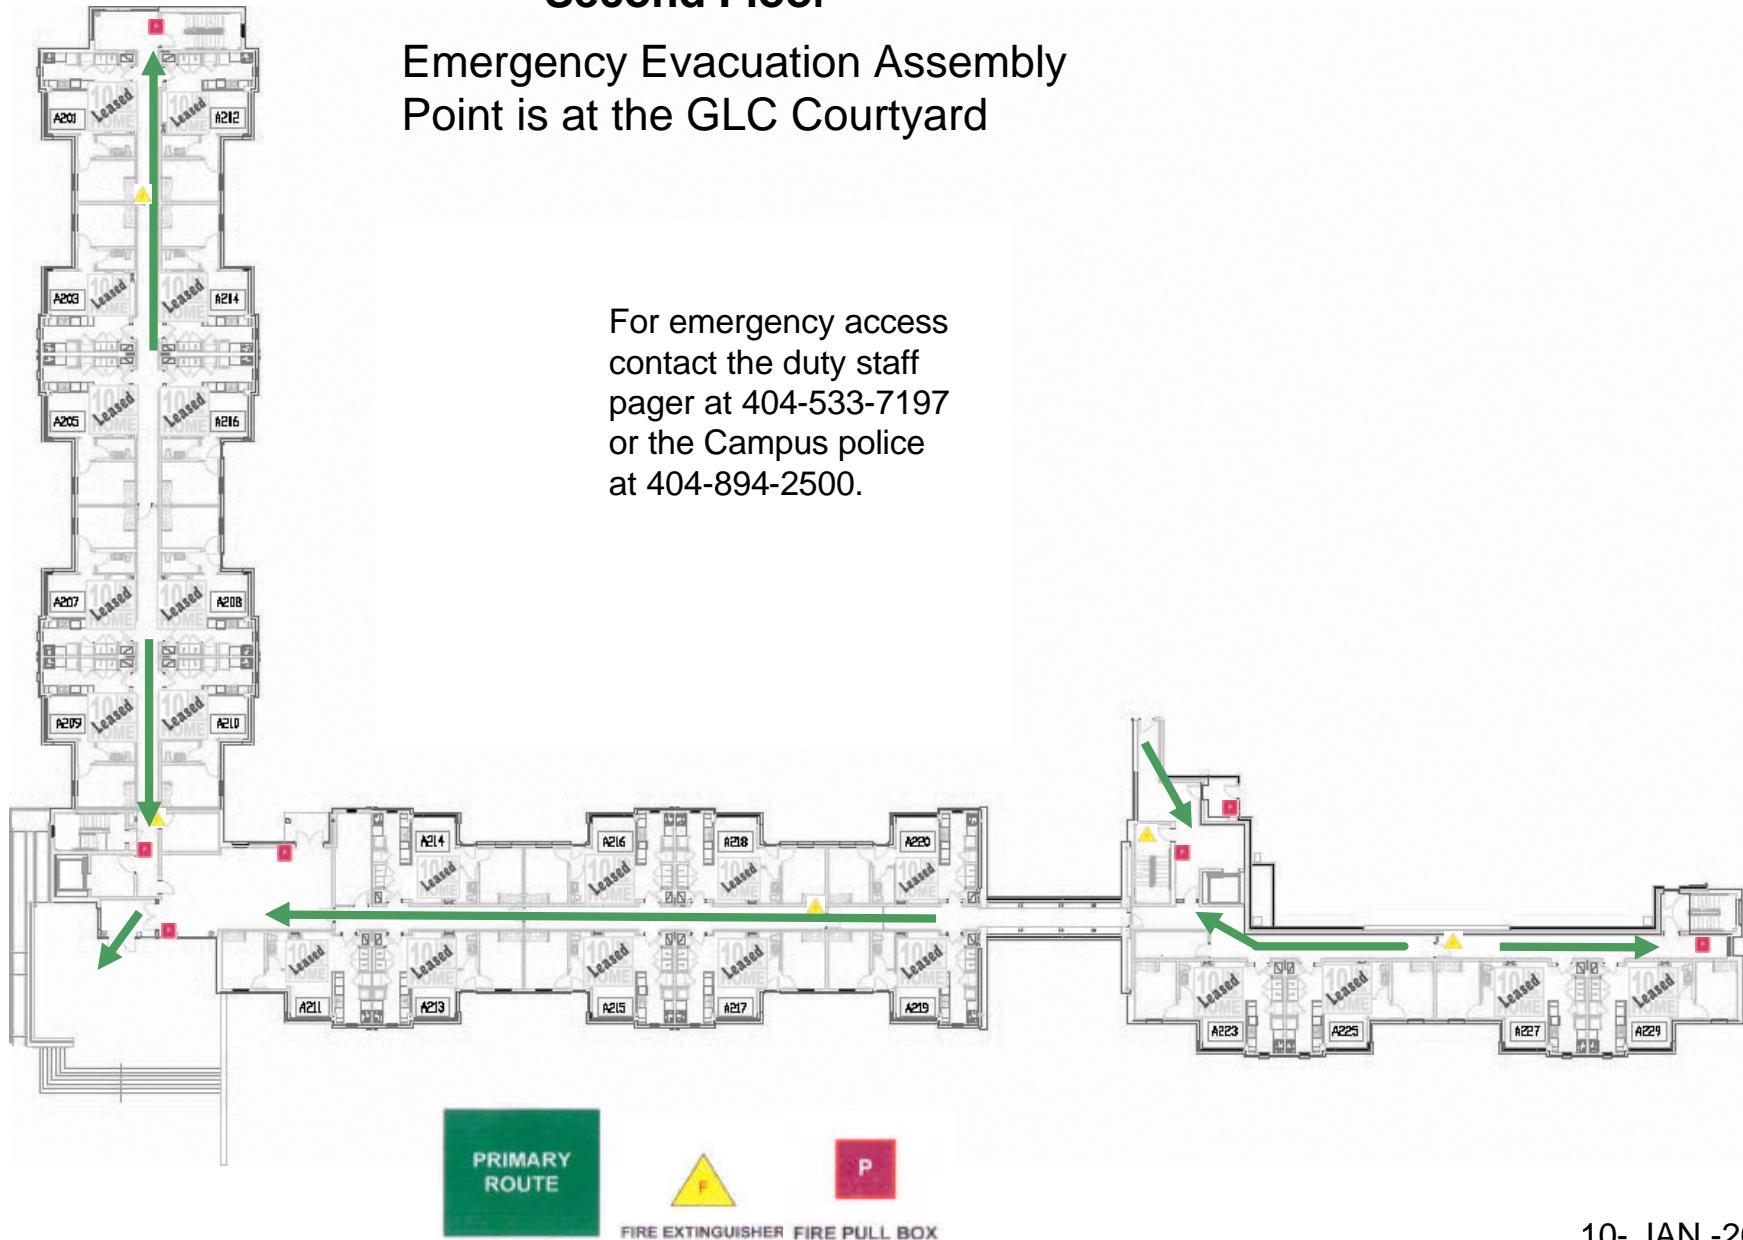


Tenth and Home Apts. - Bldg A

Third Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

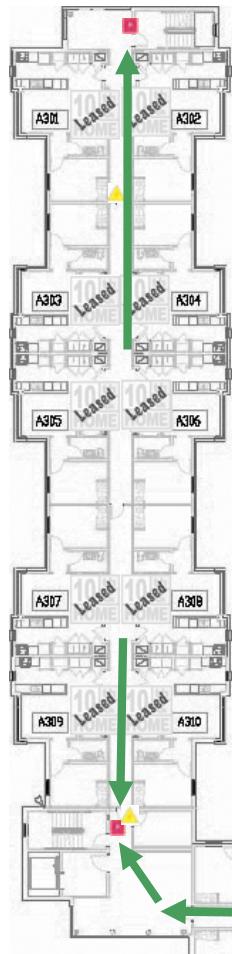

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

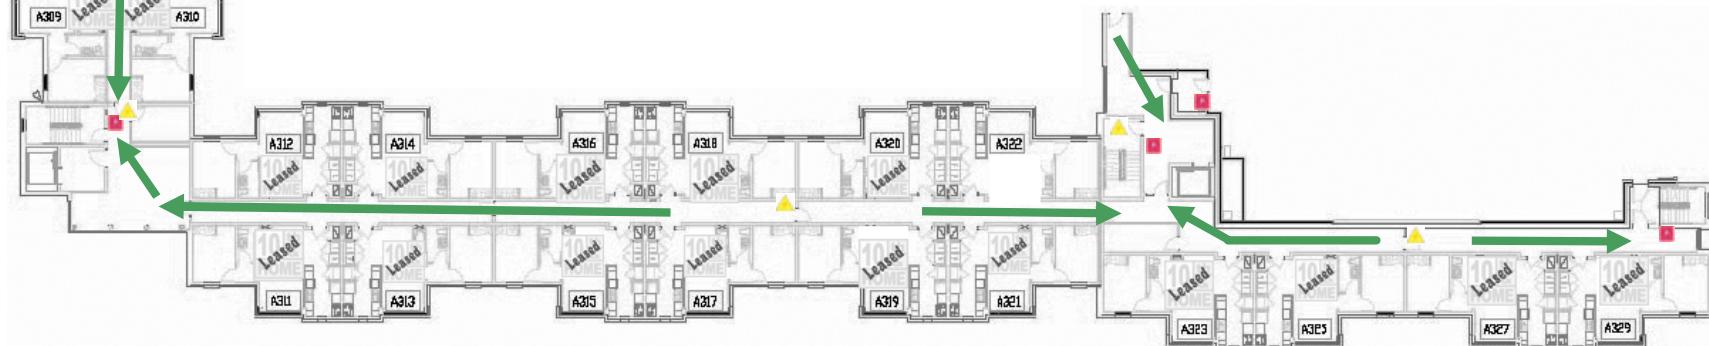

FIRE EXTINGUISHER




FIRE PULL BOX

Tenth and Home Apts. - Bldg A

Fourth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

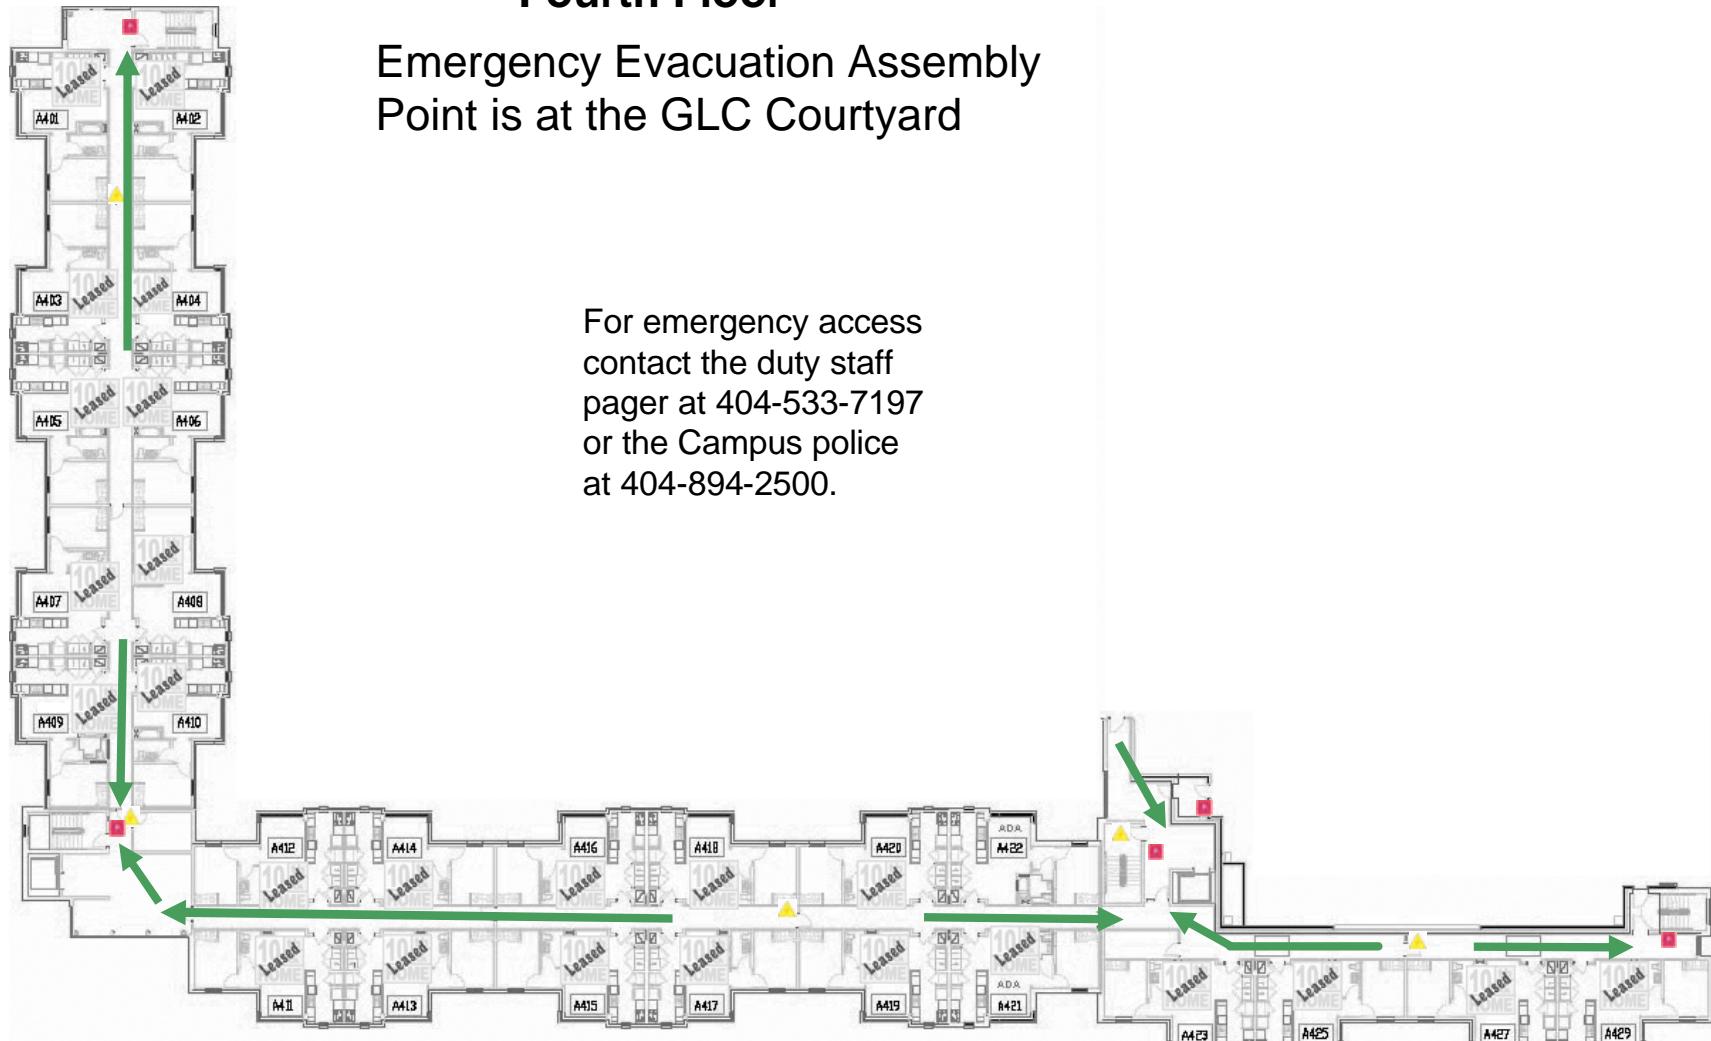


For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.



Tenth and Home Apts. - Bldg A

Fifth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

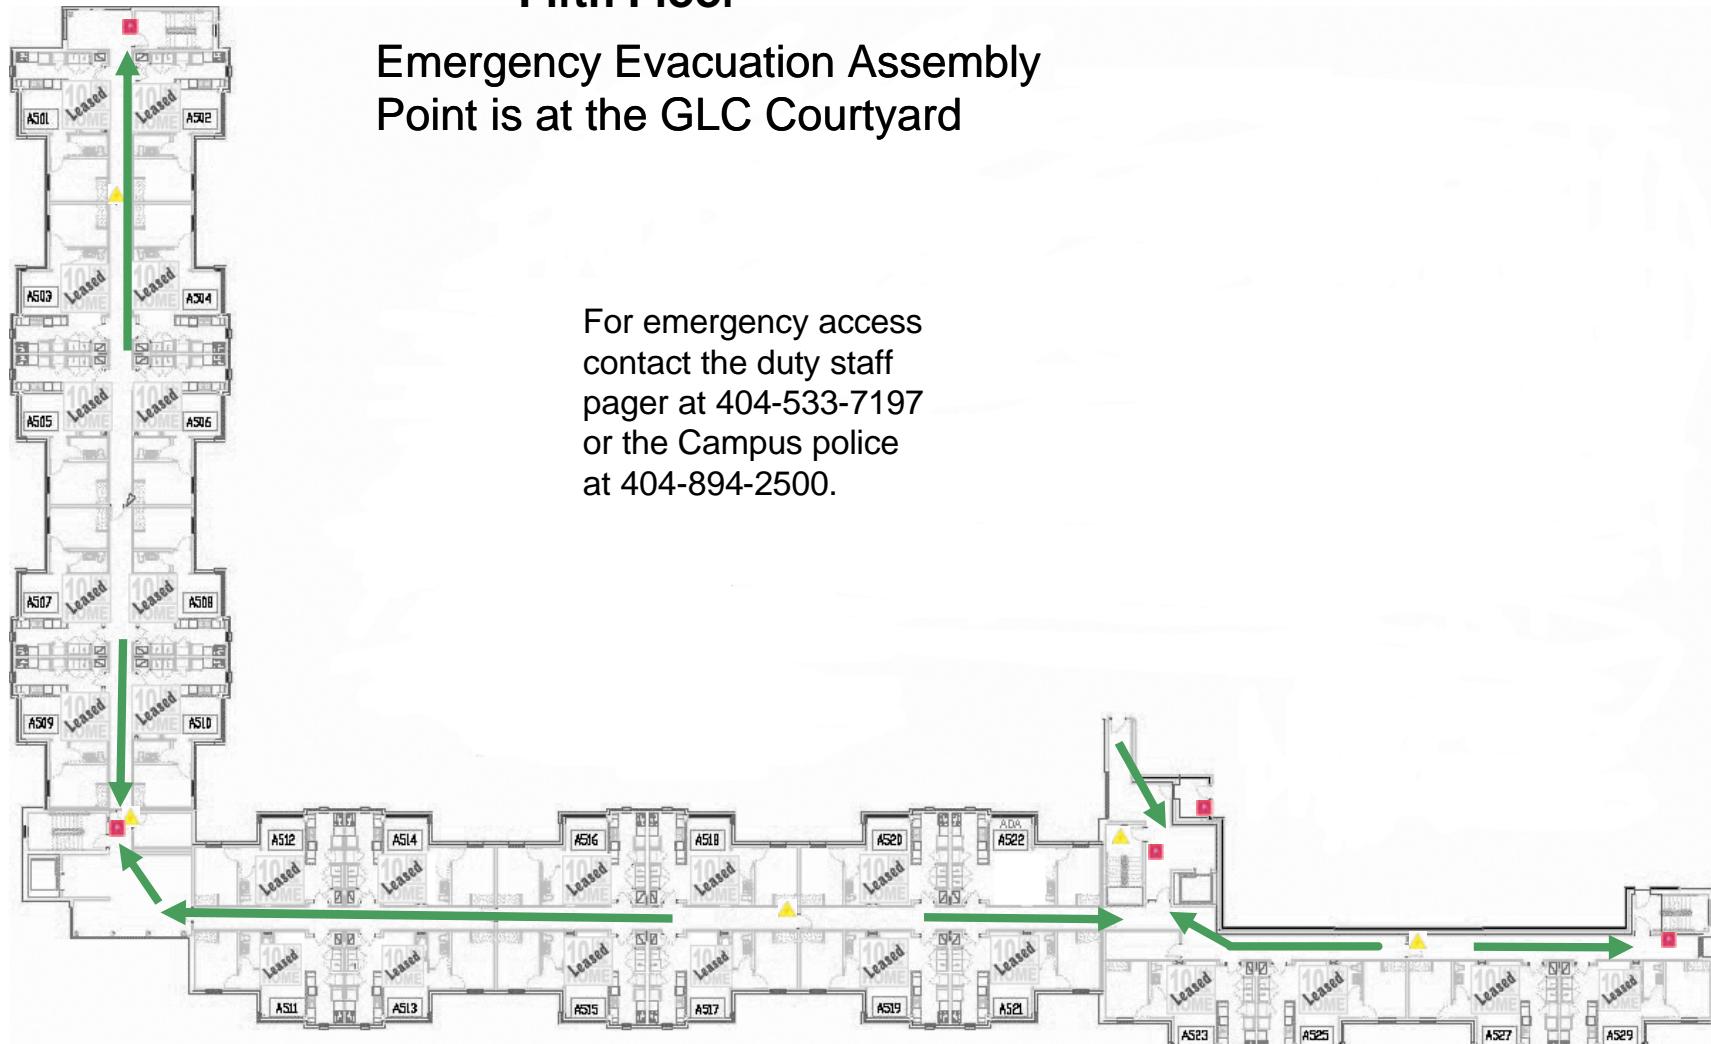


FIRE EXTINGUISHER FIRE PULL BOX

Tenth and Home Apts. - Bldg A

Sixth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

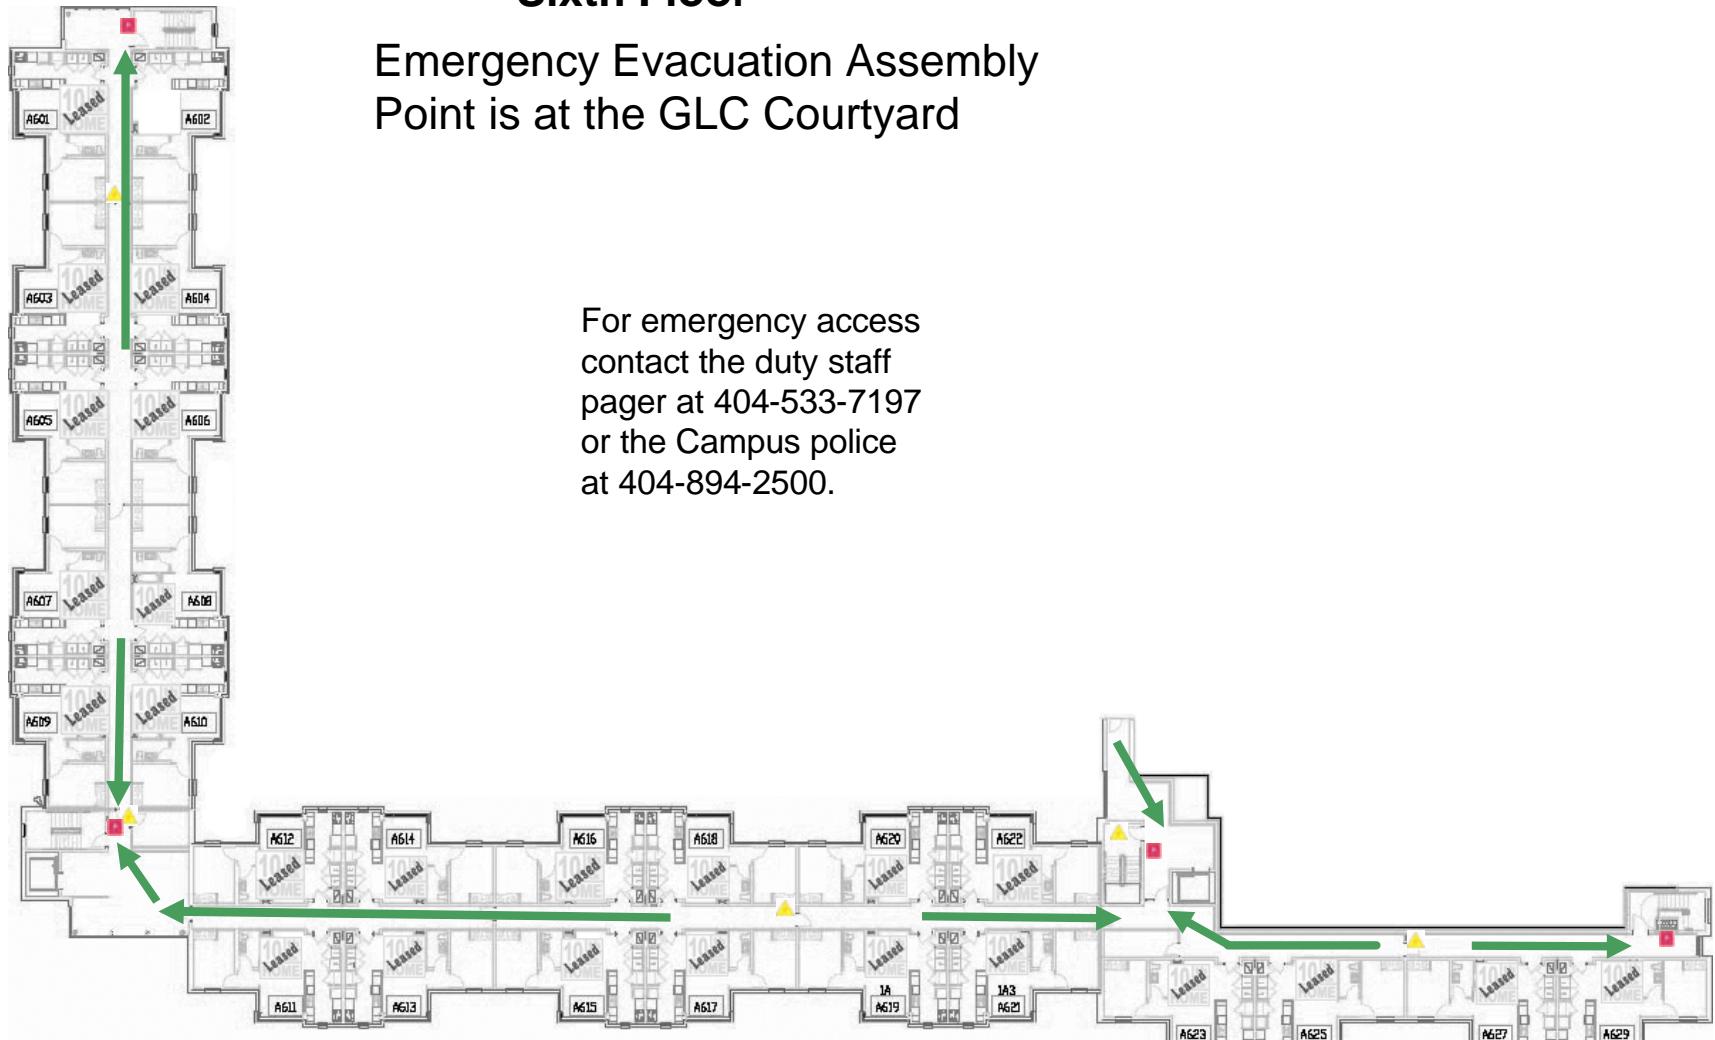

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.



Tenth and Home Apts. - Bldg A

Seventh Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

