

Tenth and Home Apts. - Bldg B

Ground Floor



Emergency Evacuation Assembly Point is at the GLC Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.


Tenth and Home Apts. - Bldg B

First Floor

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

CONC. RETAINING WALL

Emergency Evacuation Assembly
Point is at the GLC Courtyard

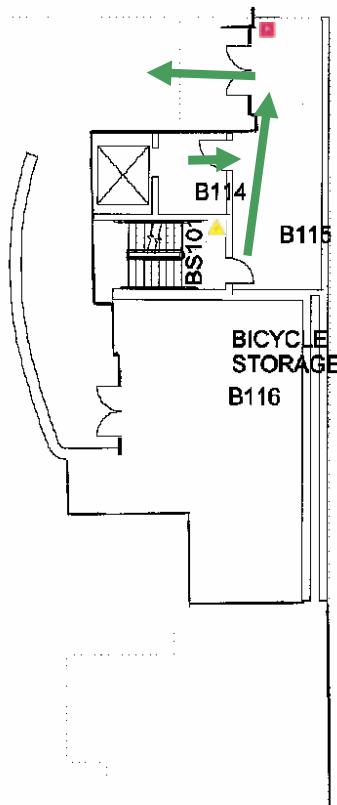


Tenth and Home Apts. - Bldg B

Second Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

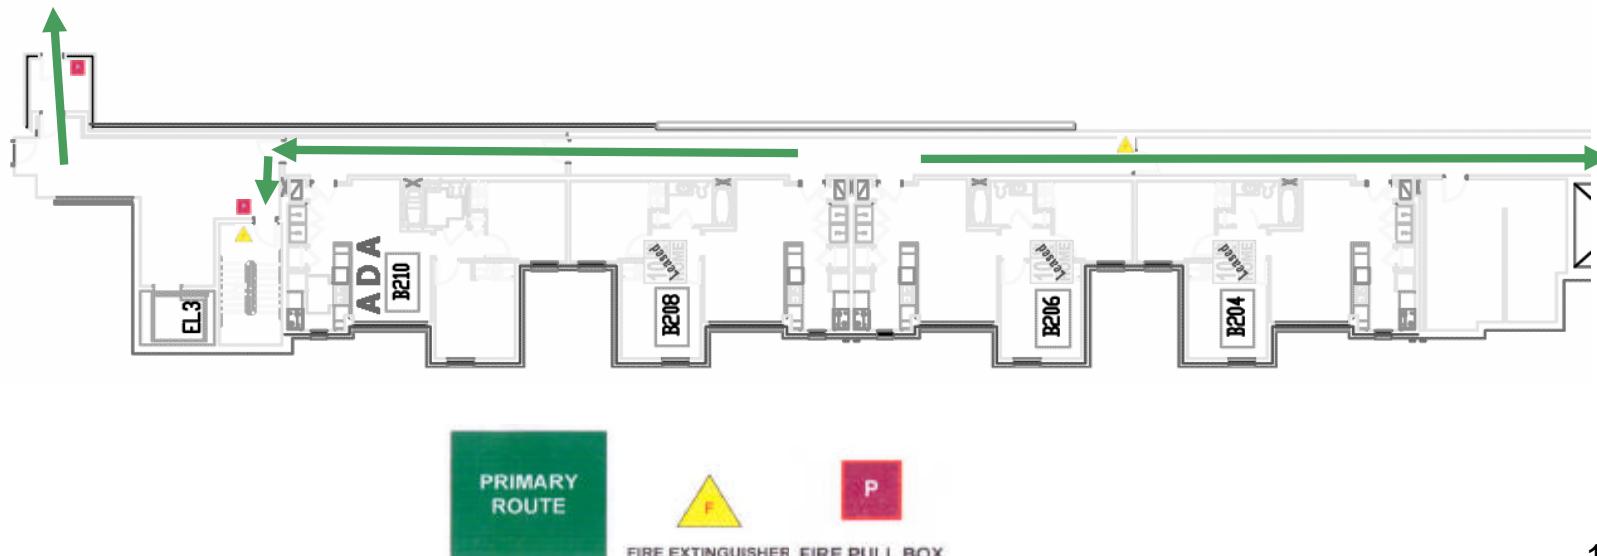


Tenth and Home Apts. - Bldg B

Third Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

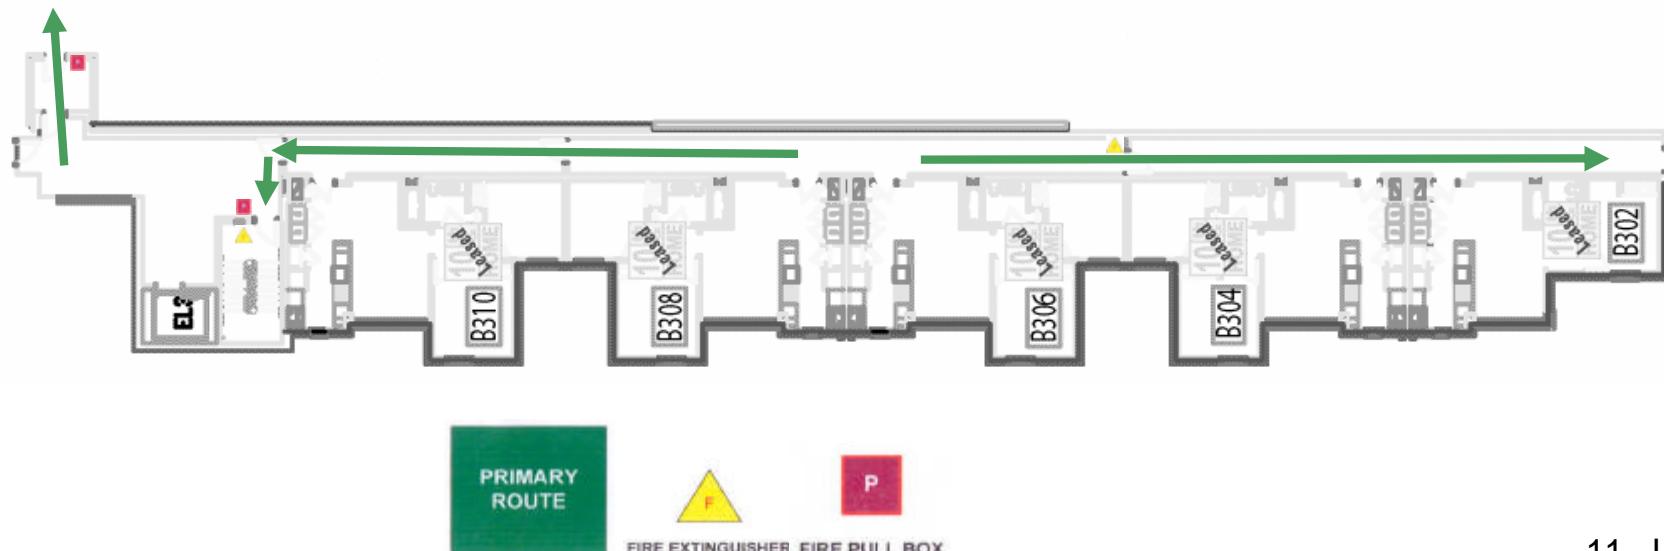

Tenth and Home Apts. - Bldg B

Fourth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.




Tenth and Home Apts. - Bldg B

Fifth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

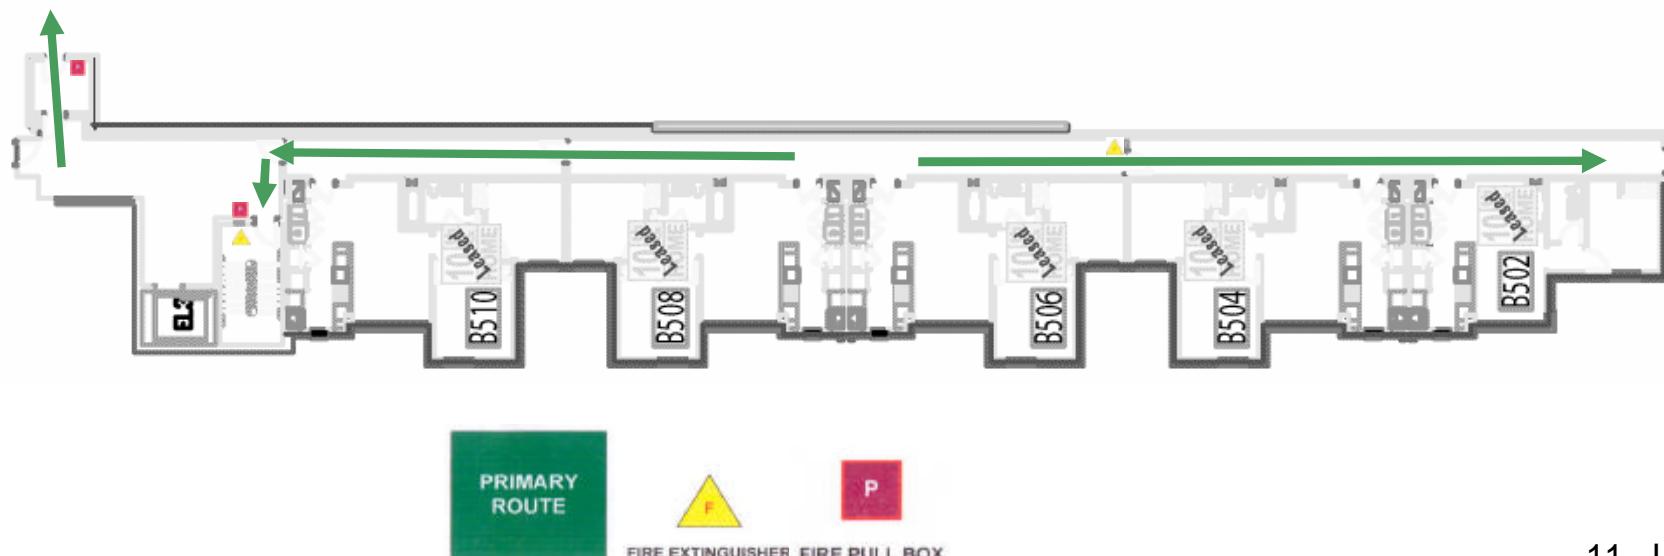

Tenth and Home Apts. - Bldg B

Sixth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.



Tenth and Home Apts. - Bldg B

Seventh Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

