

Tenth and Home Apts. - Bldg C

First Floor


Emergency Evacuation Assembly
Point is at the GLC Courtyard



Tenth and Home Apts. - Bldg C

Second Floor



Emergency Evacuation Assembly
Point is at the GLC Courtyard

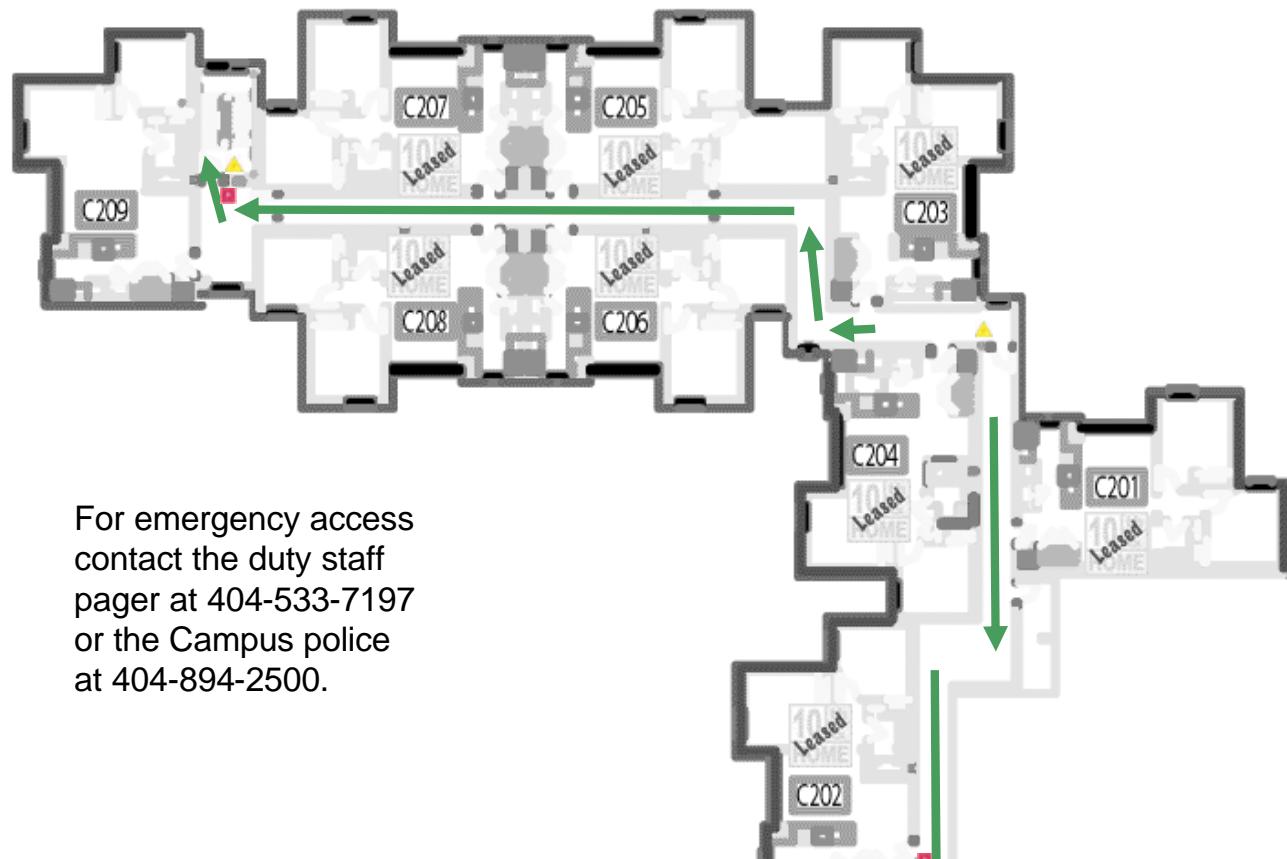

Tenth and Home Apts. - Bldg C

Third Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

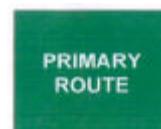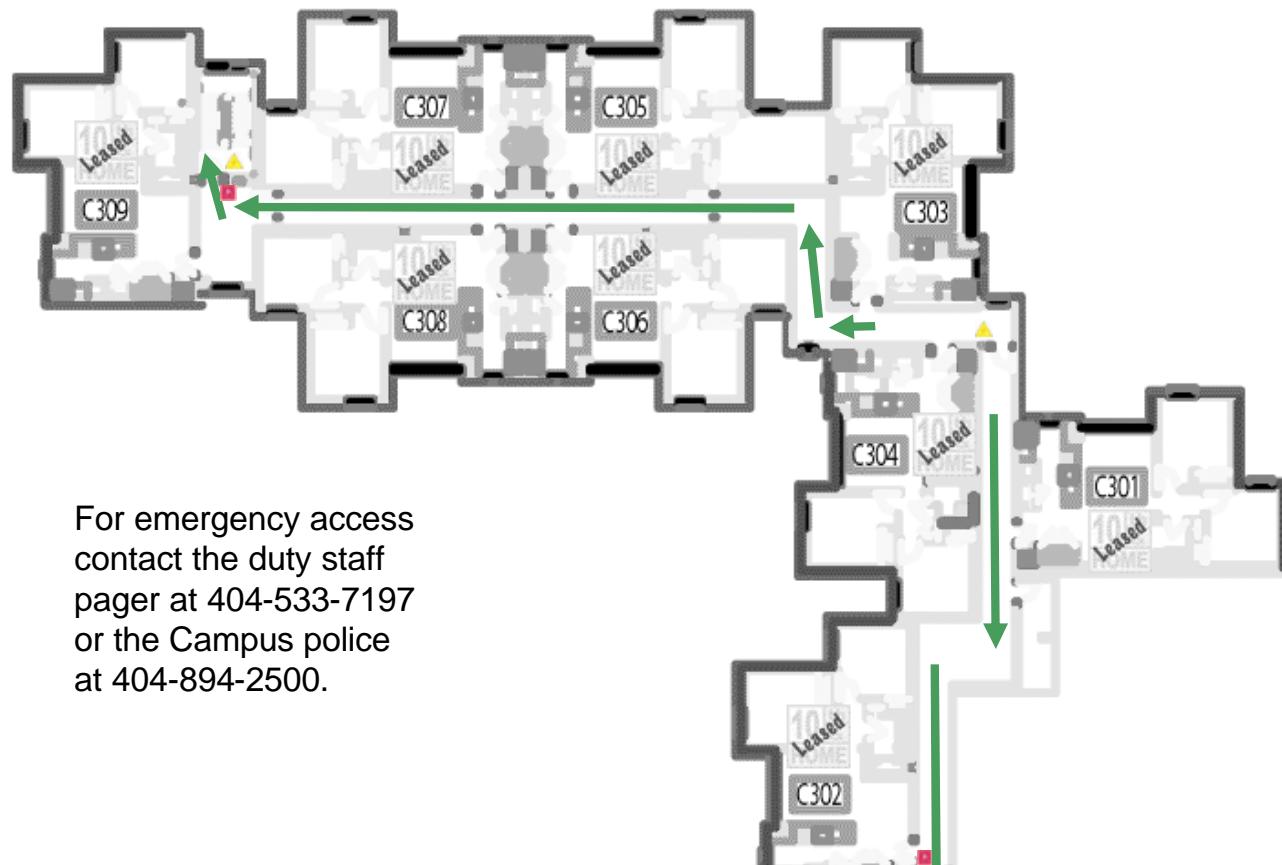


FIRE EXTINGUISHER FIRE PULL BOX

Tenth and Home Apts. - Bldg C

Fourth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

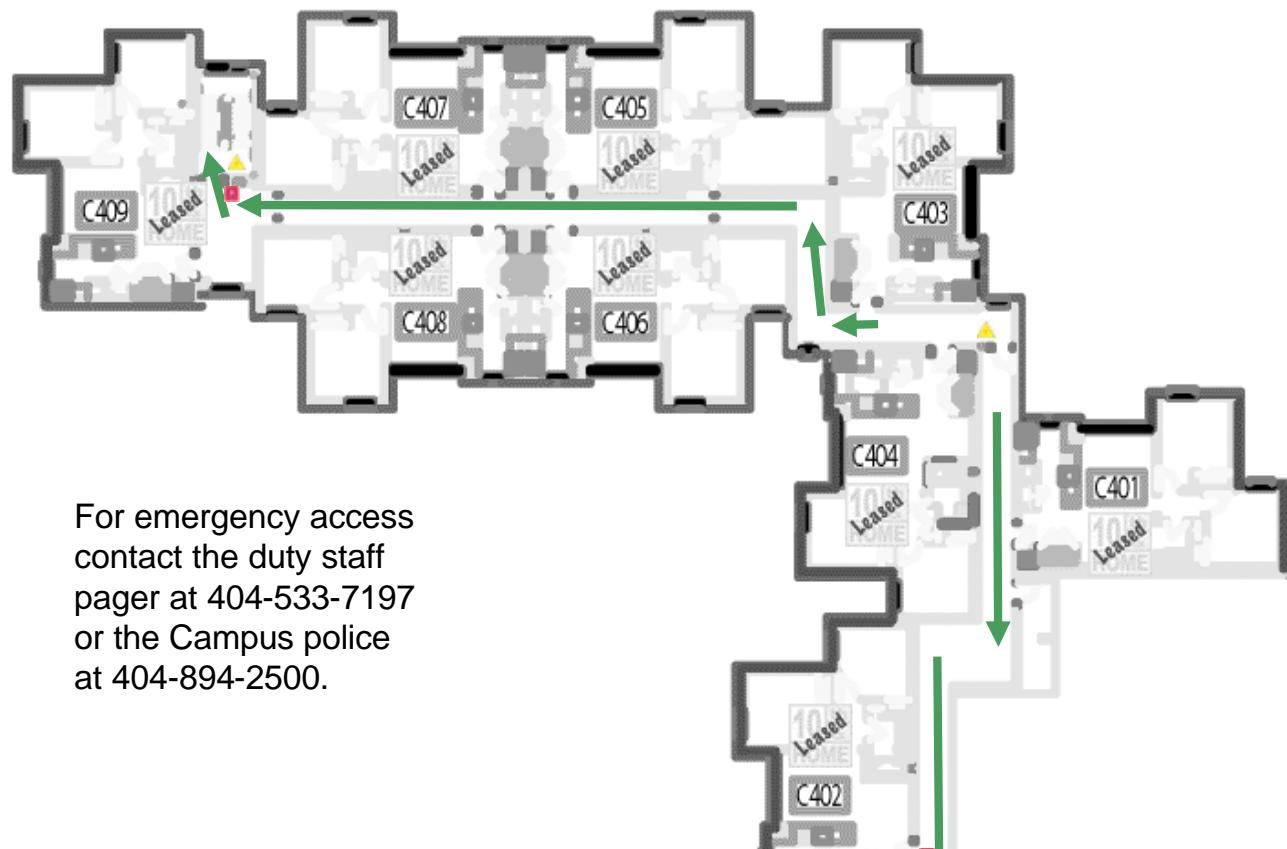


For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.

Tenth and Home Apts. - Bldg C

Fifth Floor


Emergency Evacuation Assembly
Point is at the GLC Courtyard

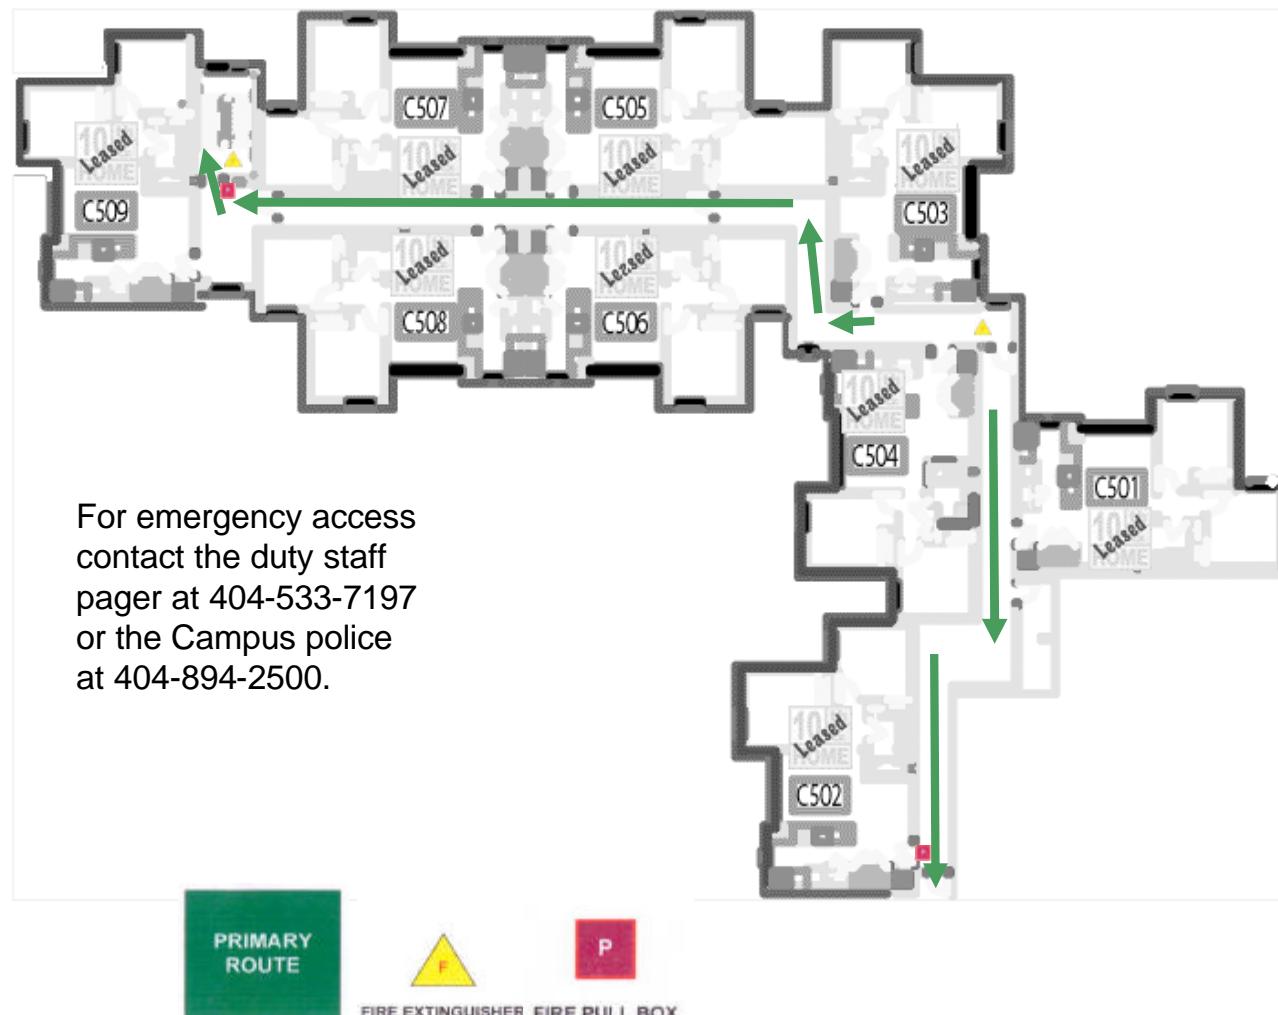

Tenth and Home Apts. - Bldg C

Sixth Floor

Emergency Evacuation Assembly
Point is at the GLC Courtyard

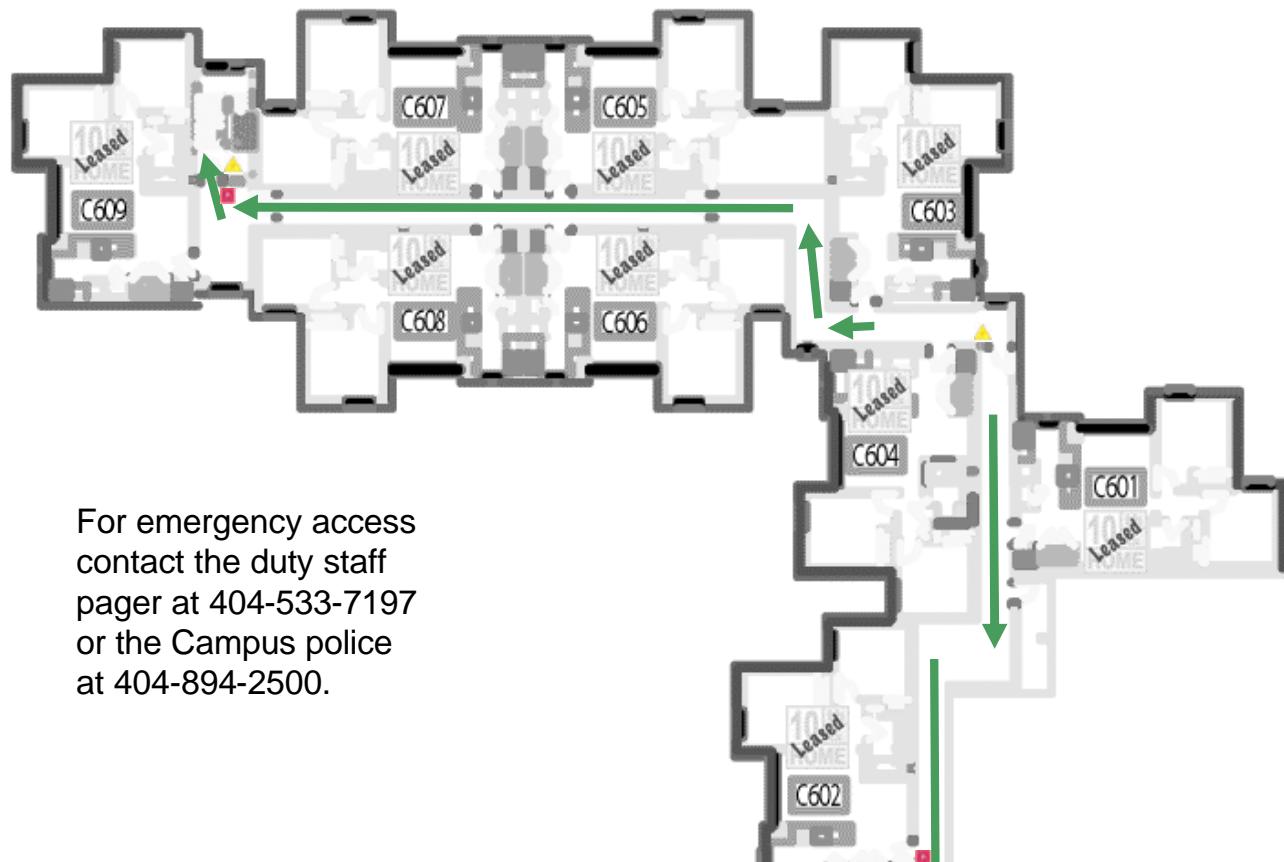

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.



FIRE EXTINGUISHER FIRE PULL BOX