

Tenth and Home Apts. - Bldg E

First Floor



Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard


For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Tenth and Home Apts. - Bldg E

Second Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

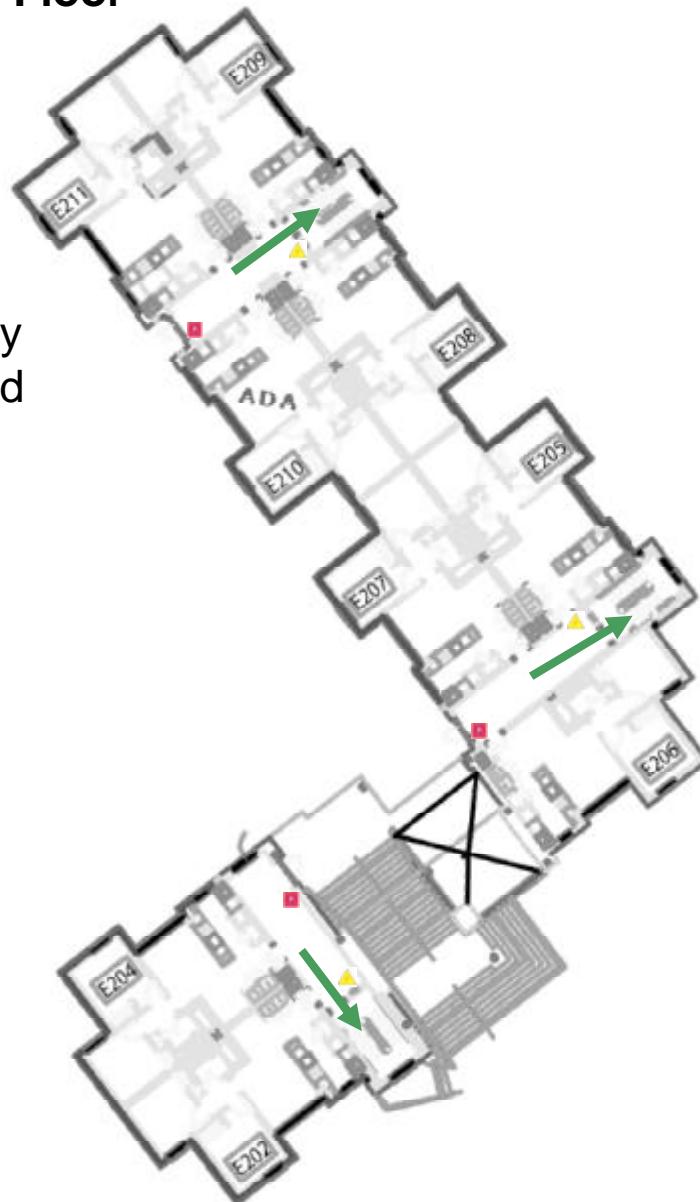


Tenth and Home Apts. - Bldg E

Third Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

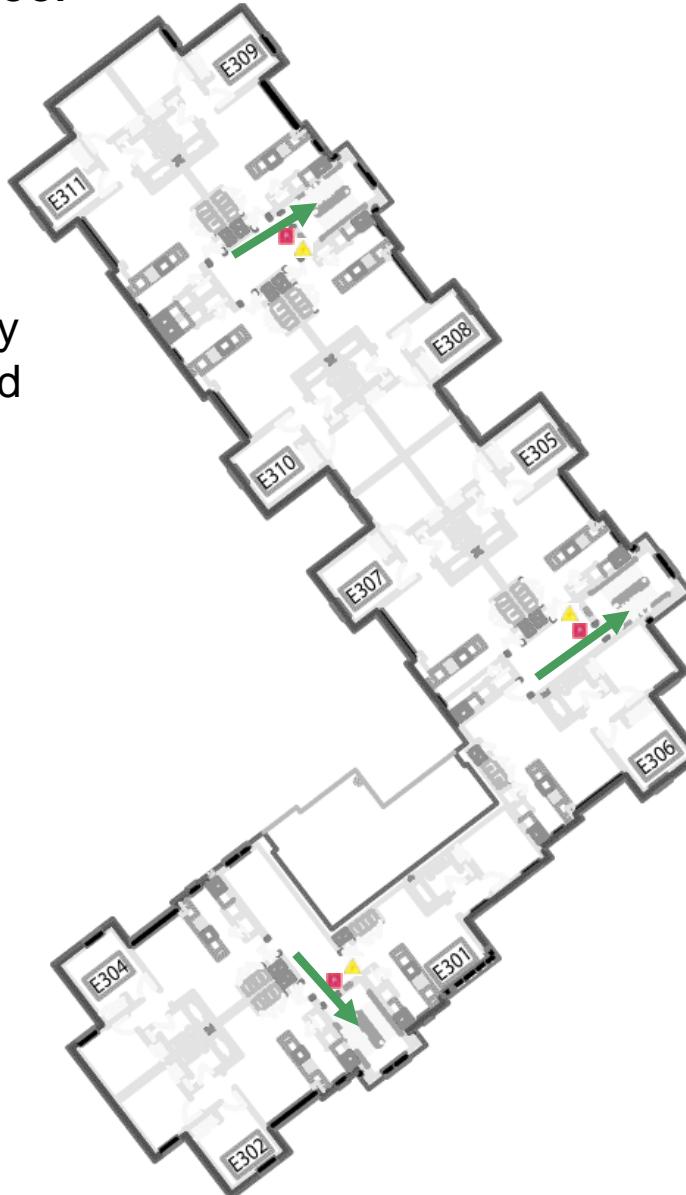

Tenth and Home Apts. - Bldg E

Fourth Floor

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

