

Tenth and Home Apts. - Bldg G

First Floor




Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Tenth and Home Apts. - Bldg G

Second Floor

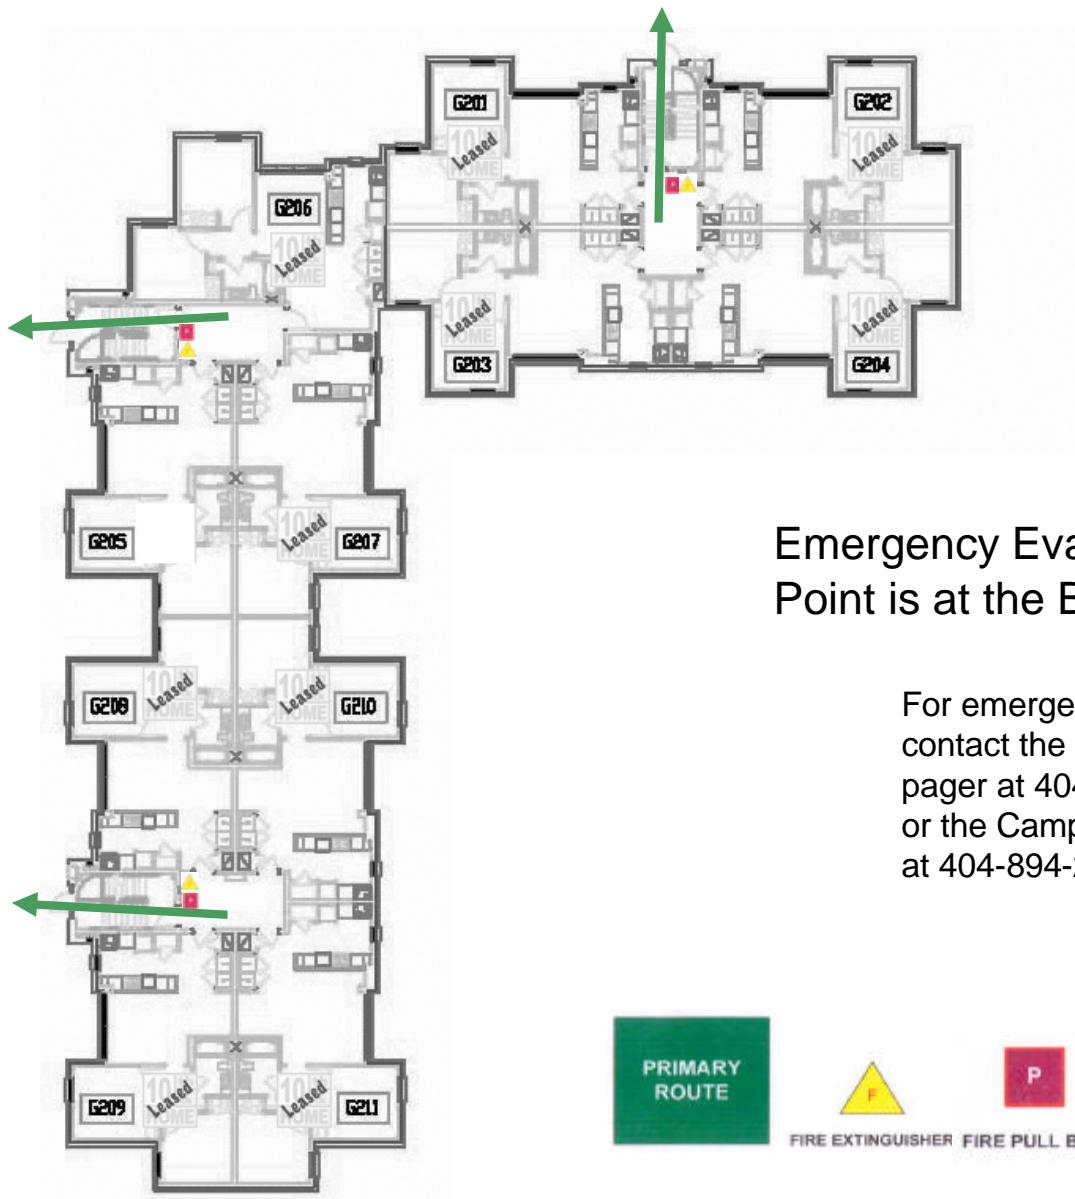


Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.

Tenth and Home Apts. - Bldg G

Third Floor

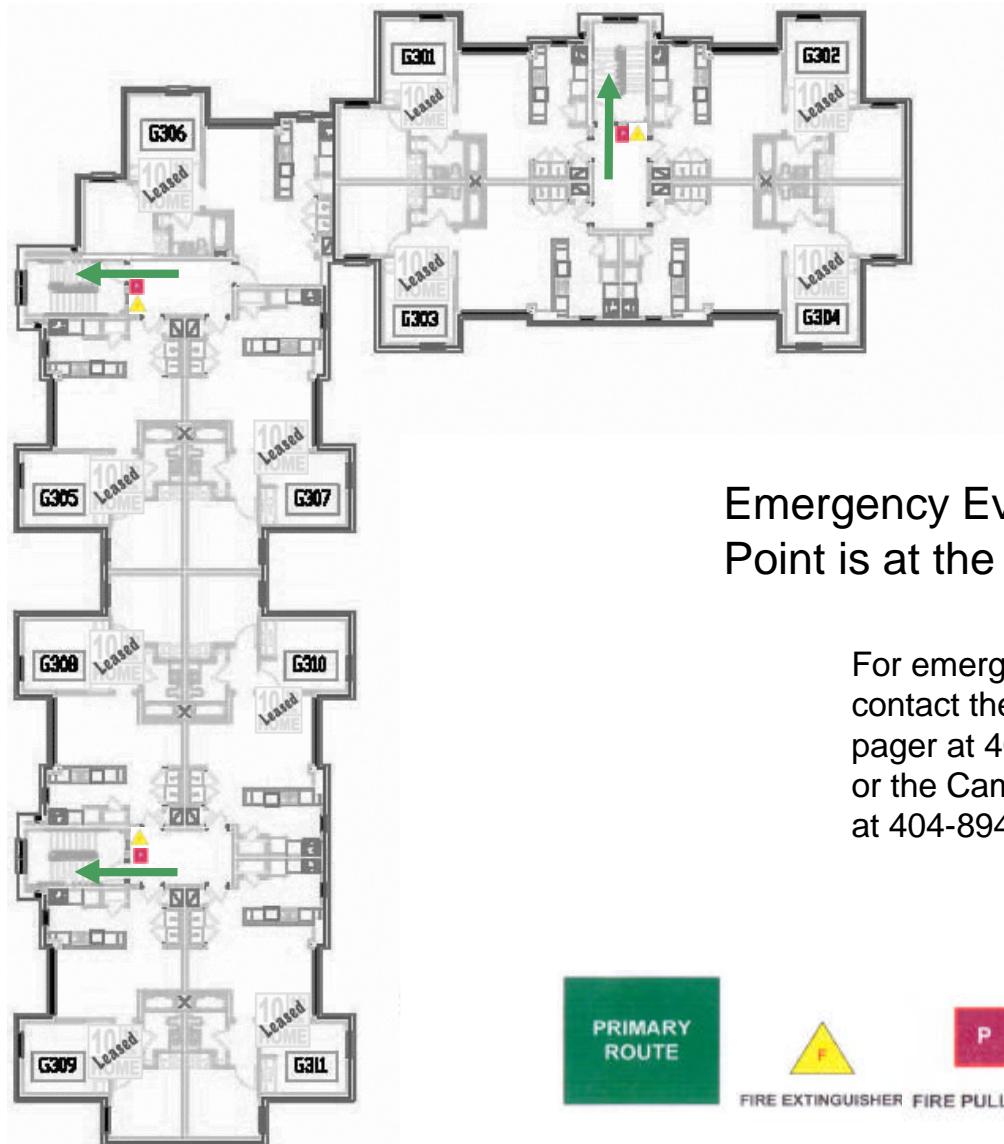


Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access
contact the duty staff
pager at 404-533-7197
or the Campus police
at 404-894-2500.



Tenth and Home Apts. - Bldg G

Fourth Floor

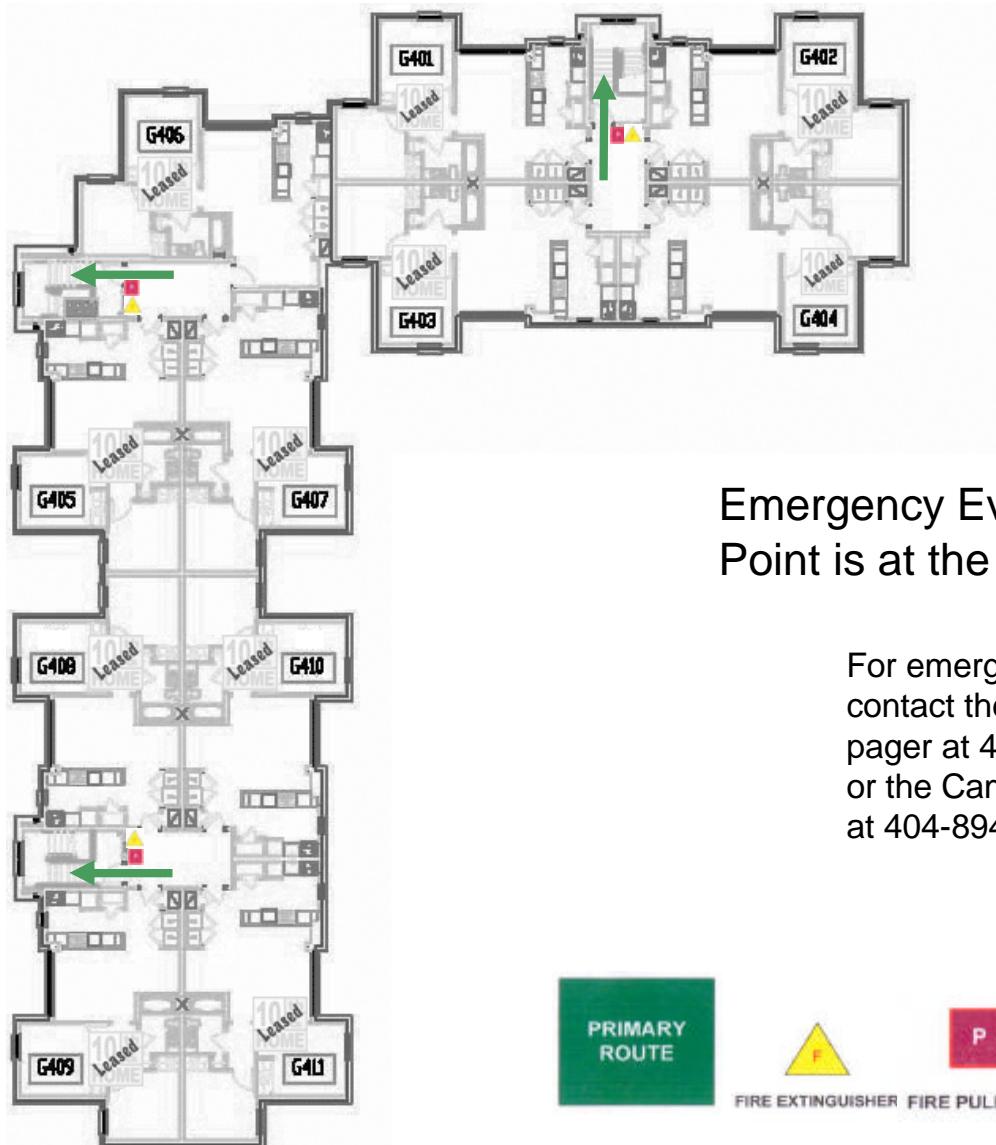

Emergency Evacuation Assembly Point is at the Bldg A/B Courtyard

For emergency access contact the duty staff pager at 404-533-7197 or the Campus police at 404-894-2500.